ASSEMBLY INSTRUCTIONS

ATTENTION: THIS PRODUCT IS NOT FOR COMMERCIAL USE INTENDED FOR RESIDENTIAL USE ONLY.

TRS19SA

PARTS LIST

PART NO.	MATERIAL CODE	PART	Q'TY
1	TRS19SA-CS05-1	TABLE TOP	1
2	TRS19SA-CS04-1	LEG LEG	4
3	62TMS20SKY101	CENTER CONNECTOR	1
4	17C40A0705001YX	BOLT M6*15	4


PART NO.	MATERIAL CODE	PART	Q'TY
5	17C40A0708001YX	BOLT M6*20	4
6	17KAA0101Y4	HEX. KEY WRENCH 4MM	1
7	17KAC3101Y3	HEX. KEY WRENCH 10MM	1
8	1404046	TOUCH-UP PAINT FOR TABLE TOP	1

Attention:

Make sure that each bolt needed for all steps matches the corresponding figure to ensure proper assembly.

Step 1:

Place the table top (#1) onto a non-abrasive surface, such as a carpet, with its underside facing upwards. Fasten the legs (#2) to the underside of the table top (#1) rim by using bolts (#4). Keep the bolts loose. See Figure 1.

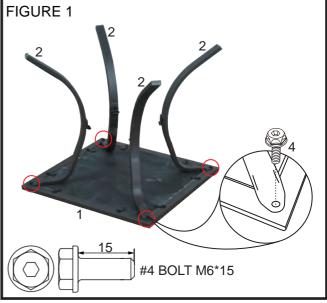

⚠ Use the correct bolts as indicated. Do not tighten any of the bolts until the table is completely assembled.
 ⚠ Do not sit or stand on this table.

Do not discard of any of the packaging until you have checked that you have all of the parts and fittings required.


Keep children away during assembly. This item contains small parts that can be swallowed by children. Children should always be under direct adult supervision while using this product.

 \triangle Retain these assembly instructions for future reference.

A Quote the following FQC NO. when contacting the service center.

SERVICE CENTER TOLL FREE NO.

TEL: 1-877-539-7436 FAX: 1-877-539-7439

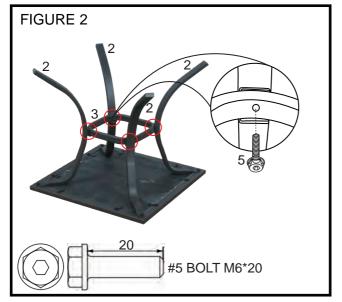

Step 2: Fasten the center connector (#3) to the middle of the legs (#2) by using bolts (#5). Make sure that all of the bolts have been tightened completely. See Figure 2.



Step 3: Turn the table to its upright position. See Figure 3.

Note:

To repair any scratches on the table top, use the touch-up paint for table top (#8) provided.

Cleaning and Maintenance

- Wash frame parts with mild soap and water, rinse thoroughly, and dry completely. Do not use bleach, acid, or other solvents on the frame parts.
- Inspect and tighten all bolts and fasteners on a regular basis to ensure proper performance and safety of your table.
- When moving the table, lift. Do not drag this table.
- We recommend the use of furniture covers when not in use.
- In order to prolong the life and beauty of your table, we recommend that it be stored in a dry and protected area during off season periods.

Warranty

- This product is covered by Courtyard Creations Inc.'s one—year limited warranty.
- Proof of purchase (dated register receipt) is required for warranty claims.
- It remains the customer's responsibility for freight and packing charges to and from the service center.

STOP!

Missing A Part? No Need To Go Back To The Store

The store where you made your purchase does not stock parts for this item.

If you need parts,
whether they are missing or damaged,
Call Toll Free:
TEL: 1-877-539-7436
FAX: 1-877-539-7439
Call us between 9:00 AM and 4:30 PM
Eastern Time Monday through Friday

For further assistance, please visit us at service.cci@polywares.com

READ THESE INSTRUCTIONS COMPLETELY BEFORE STARTING ASSEMBLY

- ★ SEPARATE AND IDENTIFY ALL OF THE PARTS, MAKING SURE THAT YOU HAVE ALL OF THE PARTS LISTED.
- ★ IF YOU DO NOT LOCATE ALL OF THE PARTS LISTED, INSPECT THE PACKING MATERIAL FOR SMALL PARTS THAT MAY HAVE BECOME SEPARATED DURING SHIPMENT.
- ★IF YOU EXPERIENCE ANY DIFFICULTY DURING ASSEMBLY OR IF ANY PARTS ARE MISSING OR DAMAGED, CALL THE HELP LINE AT 1-877-539-7436 BEFORE RETURNING THIS ITEM TO THE STORE.
- ★ PROVIDE THE FOLLOWING INFORMATION WHEN CALLING:
 1-MODEL NUMBER OF THE PRODUCT.
 2-PART NUMBER AND MATERIAL CODE OF THE PART FROM THE PARTS LIST.
- ★MOST PROBLEMS CAN BE RESOLVED WITHOUT RETURNING THIS PRODUCT TO THE RETAILER.

PAGE 2 OF 2