10x10' Pogoda Gazebo

TV. No: 243341



IMPORTANT:

- 1. Keep all children and pets away from assembly area. Children and pets should be supervised while gazebo is being assembled.
- 2. The assembled gazebo should be located at least 6 feet (2 m) from any obstruction such as fence, garage, house, overhanging branches, laundry lines or electrical wires.
- 3. Do not assemble this item alone. Four people are recommended for safe assembly.
- 4. Some parts may contain sharp edges. Wear protective gloves if necessary during assembly.
- 5. When assembling and using this product, basic safety precautions should always be followed to reduce the risk of personal injury and damage to equipment. Please read all instructions before assembly and use.
- 6. For outdoor use only. Install on level ground. 4 stakes are provided to secure the gazebo in the ground. If you wish to secure the gazebo to a wood deck or concrete surface, use 4 anchors suited to these surfaces (anchors not included).
- 7. Check all bolts for tightness before and during usage.
- 8. Please check your state and local regulations prior to purchasing. Some jurisdictions may require permits for installation and use. Some special procedures may be valid in your area.
- 9. Always ensure that the roof canvas is tensioned, so as to avoid water accumulation on the roof.
- 10. Remove accumulated water on the roof immediately, or disassemble the gazebo in order to avoid damages.

NOTE: The gazebo's roof and structure are not guaranteed against extreme weather conditions (storms, high winds, etc.). Please dismantle gazebo for the winter season. Any damage caused by snow accumulation is not covered by the warranty.

Care & Maintenance:


Our steel components for garden accessories and furniture are treated with rust inhibiting paint that protects it from rusting. However, due to the nature of steel, surface oxidation (rusting) will occur if these protective coatings are scratched. This is not a defect and thus not covered by the warranty.


To minimize this condition, we recommend care when assembling & handling the product to prevent scratching the paint. Should any scratching or damage occur, we recommend immediate touch-up with rust inhibiting paint.


Surface rust can also be easily removed with a very light application of common cooking oil. If surface oxidation (rusting) occurs and if no measure is taken to prevent this, the oxidation may start dripping onto deck or patio and caused damaging stains, which may be difficult to remove. This can be prevented if the above-mentioned measures are taken to keep the product from oxidizing.

Parts list:


No.	Description	Qty	Image
А	Gazebo frame	1	
В	Connector	4	
С	Small canopy	1	
D	Large canopy	1	
E	Mosquito netting	1	
AA	Stakes	8	
BB	Large stakes	4	
CC	Rope	4	>
DD	Netting rope	4	~
EE	Rings	32	
FF	Bag	1	

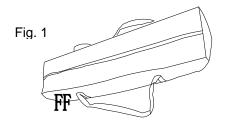


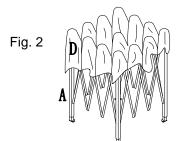


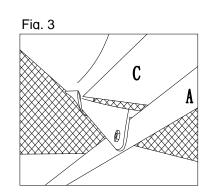

- Step 1: Take out the gazebo (A) from the bag (FF).
- Step 2: Place the gazebo frame (A) upright and attach the large canopy (D) on top. Have four people holding the corner posts and pulling outwards.
- Step 3: Attach the Small canopy (C) to the plastic parts of the small top when pulling the gazebo outwards.

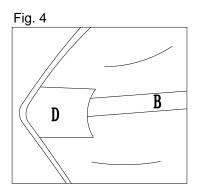


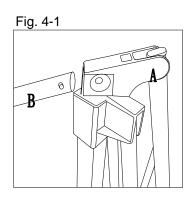


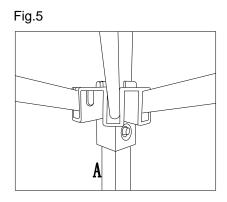



Step 4 & 4-1: Secure the large canopy (D) to four corners by using connectors (B). Insert the other end of the connector (B) to the plastic buckle (A) and secure it to the spring buckle. Assemble the velcro straps.

 Step 5: Pull the plastic buckle of the gazebo (A) post to the spring buckle and secure it.

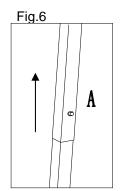



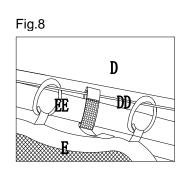

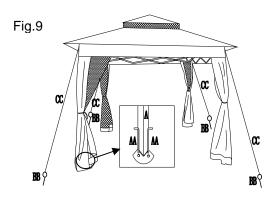

Step 6: Pull the gazebo post upwards, up to the spring buckle to secure in place.

Step 7: Secure hooks on the large canopy (D) to the lower end of each post to tighten the large canopy.

Step 8:: Pass the netting rope (DD) through the velcro rings on the large canopy (D) and tighten netting rope (DD) in place. Attach mosquito netting (E) to the netting rope by using rings (EE).

Step 9: Secure the gazebo to the ground by using stakes (AA) and ropes (CC); tighten ropes on the corners of the large canopy (D) and secure each rope with large stakes (BB).

Please do not return this product to the store. For technical assistance on assembly or replacement parts call Sunjoy Group at 1(866) 578-6569 at any time or visit www.sunjoyonline.com to place your order