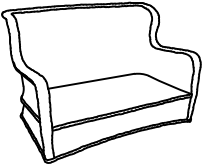
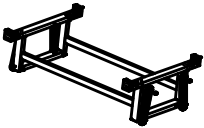

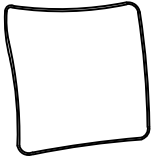
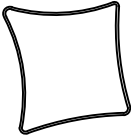


 




Assembly Instruction

TV Item No. 246316

<p>A x 1</p> 	<p>B x 1</p> 	<p>C x 2</p> 	<p>D x 2</p> 
<p>Ex 2</p> 	<p>F x 4</p>  <p>1/4" x 65mm</p>	<p>H x 8</p>  <p>1/4"</p>	<p>K x 1</p> 
	<p>G x 4</p>  <p>1/4"</p>	<p>J x 4</p> 	<p>L x 1</p> 