



Assembly Instruction

TV Item No. 246317


STEP:1

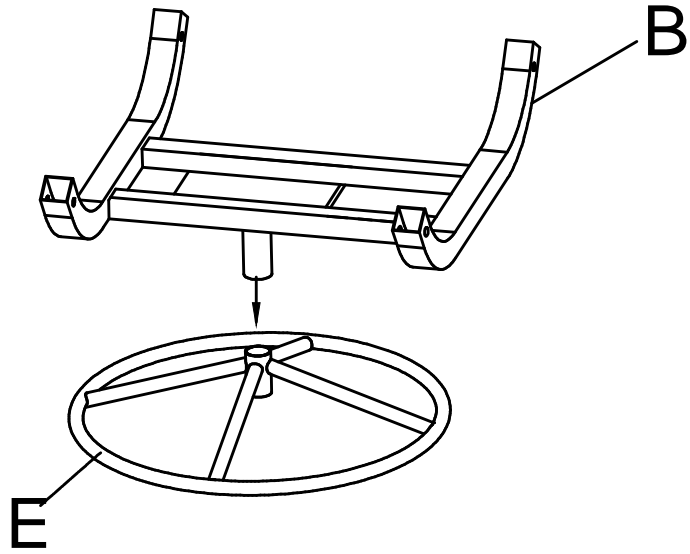


STEP:2

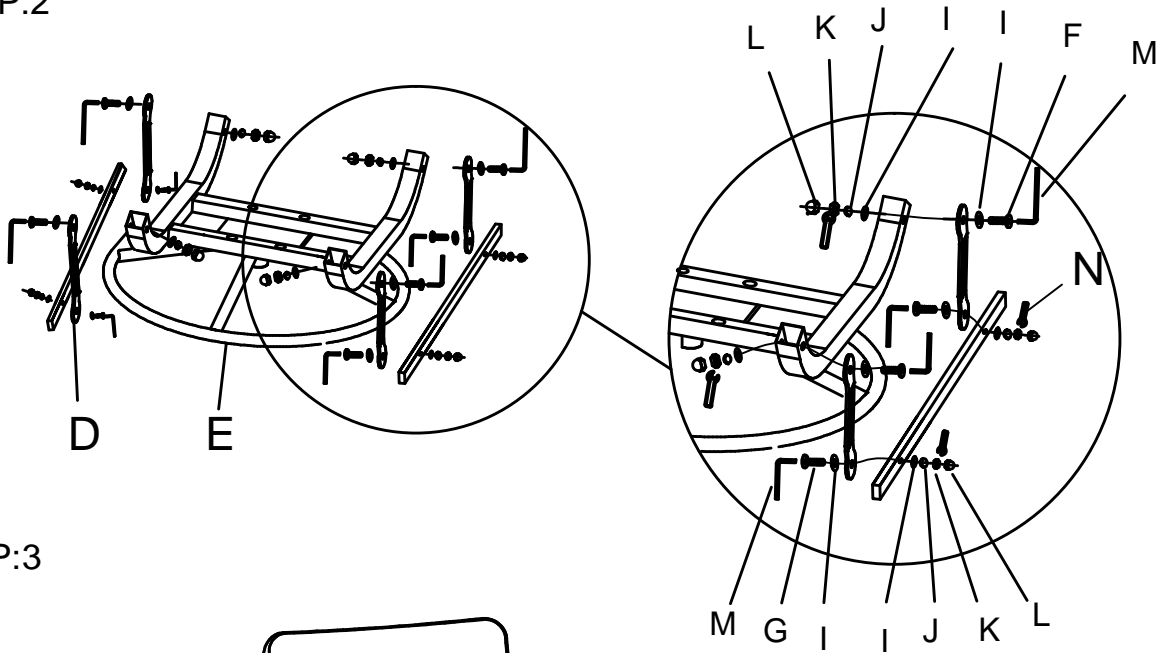



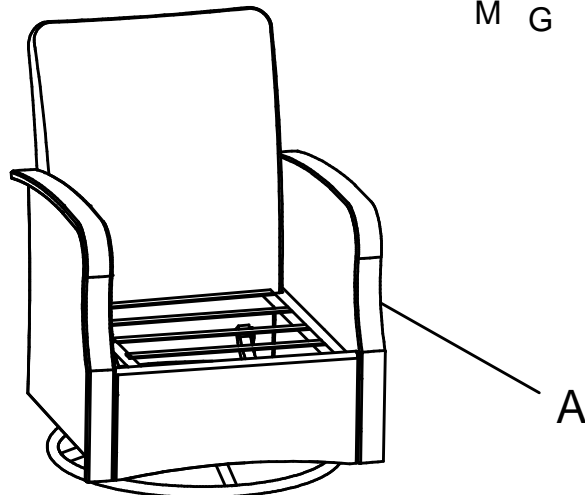



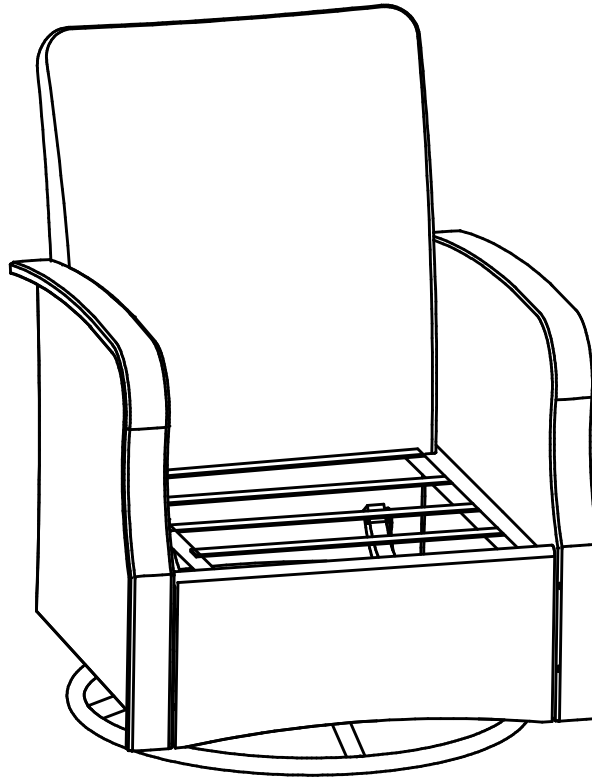






STEP:3



   Assembly Instruction



Item	Photo	Description	Qty	Item	Photo	Description	Qty
A		Seat	1	I		Washer(M6)	16
B		Connector	1	J		Lock washer(M6)	8
C		Bottom ring	1	K		Nut(M6)	8
D		Shake piece	4	L		Nut cap(M6)	12
E		chassis	1	M		Allen Key(M6)	1
F		Allen screw (M6*45)	4	N		Allen Key(M6)	1
G		Allen screw (M6*40)	4				