

UPTOWN 42" Iron Mesh Dining Table
1142-QRXU-TV
ASSEMBLY INSTRUCTIONS

Step 1: Remove all protective materials and assemble all parts on a flat surface.

Step 2: Identify all parts packed with carton against attached parts list.

Step 3: Assemble all of the following parts together as shown in picture below: tabletop(A), leg(B), barcket(C) with bolt(D), bolt(E) and washer(F),...etc..

If needed, turn furniture upside to facilitate assembly. Make sure all parts are aligned properly before tightening bolts and nuts.

Step 4: Tighten bolts and nuts by using hex wrench (H) included in parts bag. Cover bolts with bolt covers and nuts with nut covers. Be sure bolts and nuts are tightened securely and aligned. It is user's responsibility to make sure all parts are assembled and tightened correctly and securely.

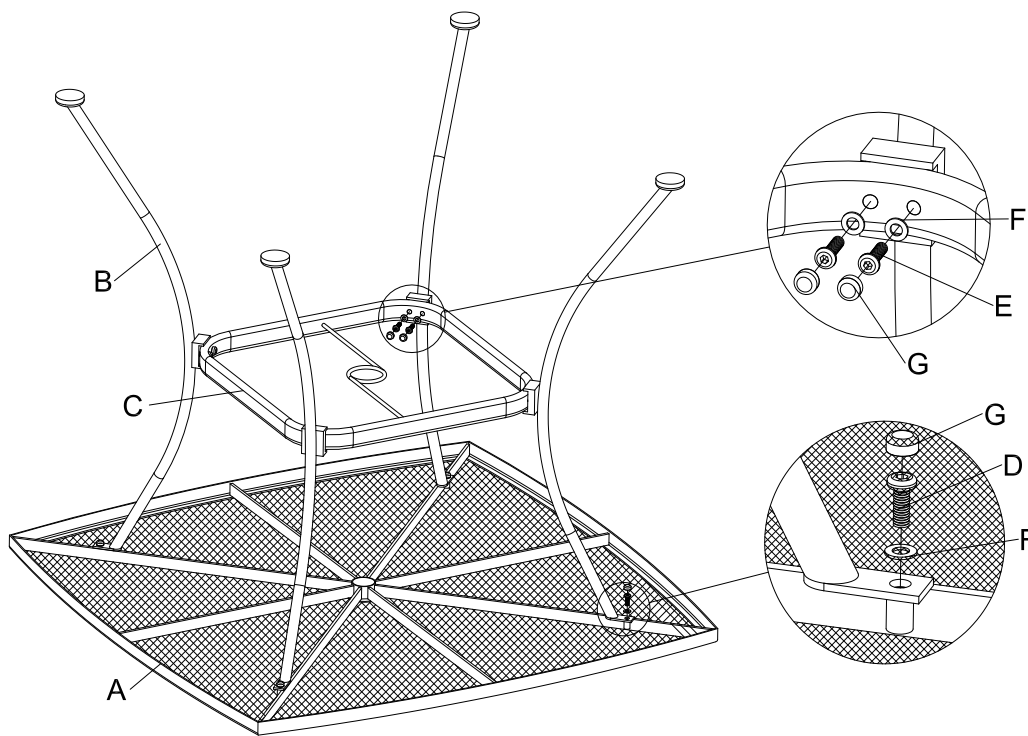
 
 


 

 



photo 1

PARTS LIST							
A	Table top		1	E	Bolt (M6x20)		8
B	Leg		4	F	Washer (M6)		12
C	Barcket		1	G	Bolt cover		12
D	Bolt (M6x15)		4	H	Hex wrench		1

Woodard Worldwide
Customer Service Hours
8:00am-5:00pm CST
Monday to Friday
Phone: 1-800-877-2290
Fax: 1-800-733-4257
Email: retail3@woodard-furniture.com
PRINTED IN CHINA