


IMPORTANT: READ CAREFULLY BEFORE BEGINNING!

- Make sure that all parts and hardware are present before assembly.
- Assemble on an non-marring and level surface.
- Do not completely tighten all nuts and bolts until the chair is fully assembled.
- The recessed holes face outward.

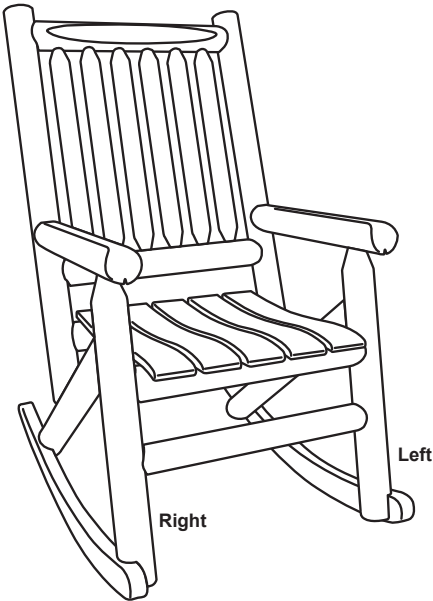

Amber-Log® Porch Rocker

ITEM # TX 36000, TX 36002, TX 36005 & TX 36007

PARTS AND HARDWARE LIST

① ARM REST	② FRONT LEG	③ DIAGONAL SUPPORT	④ VERTICAL SUPPORT
 X 2pcs	 X 2pcs	 X 2pcs	 X 2pcs
⑤ LOWER SUPPORT BEAM	⑥ SEAT PANEL	⑦ BACK PANEL	⑧ RUNNER
 X 1pc	 X 1pc	 X 1pc	 X 2pcs


Tools Required for Assembly	Tools Included	A NUT & BOLT	B NUT & BOLT	C SCREW	D SCREW
 Mallet 13mm Phillips Screwdriver		 (8x120mm) X 12pcs	 (8x70mm) X 4pcs	 (4x40mm) X 2pcs	 (8x120mm) X 4pcs

STEP 1: Assembling the Rocker Arm Frame

Take one piece of the following parts with a letter "R" behind each number: 1, 2, 3, 4, 8 ("R" = Right)

- 1: Part 1 to part 4
- 2: Part 3 to part 2
- 3: Part 2 to part 1
- 4: Part 4 to part 3
- 5: Part 8 to Part 2 & 3


Use indicated hardware, directed by diagram.

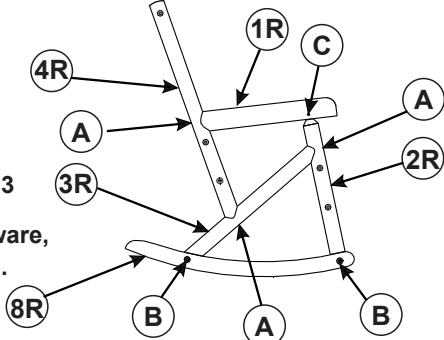

REPEAT steps 1 through 5 above using parts labeled with a letter "L" ("L" = Left) after the part number.

STEP 2: Assembling the Bottom Half


Take assembled SEAT PANEL (6) and one of the arm frames, Attach the SEAT PANEL (6) to the inside of the arm frame, secure with the indicated nuts and bolts.

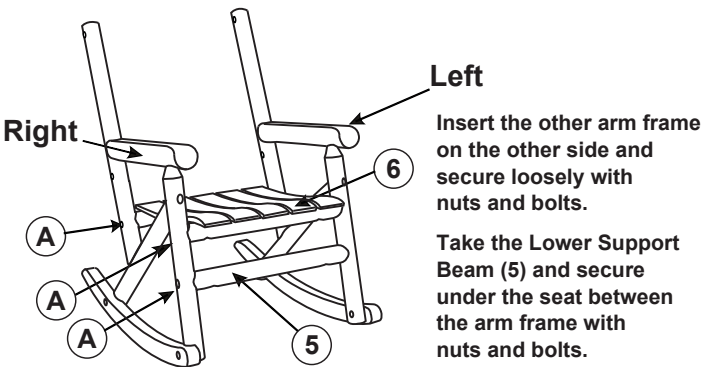

STEP 3: Assembling the Upper Half


Once the bottom half is finished, take the BACK PANEL (7) and place it gently on part 4 of the arm frame.

Secure with indicated hardware in the diagram.

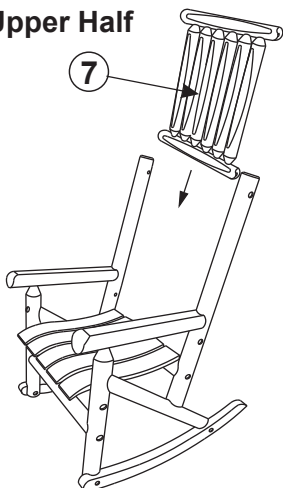

STEP 4: Finish

Tighten all nuts, bolts, and screws once every part and assembled pieces are in place.

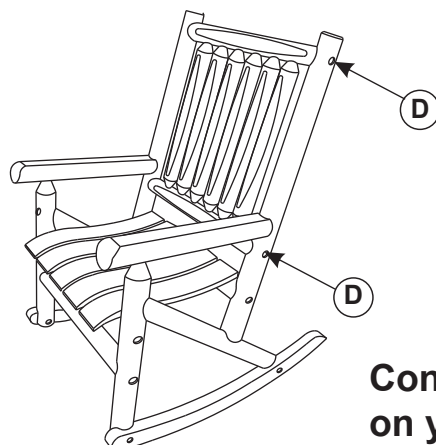

Congratulations on your assembly!

Limited Warranty and Care Instructions

LIMITED ONE YEAR WARRANTY (NON-TRANSFERABLE)

This product is covered under United General Supply's (UGS) one (1) year limited warranty. To the original purchaser of this piece of furniture, cooler or accessory; UGS warrants that it will be free from defects in material and workmanship for up to one year from the date of purchase under normal use and proper care.

Replacement of defective or missing parts will be sent at no charge to the customer for a period of 30 days from the date of purchase. UGS will no longer be responsible for missing parts or hardware 30 days after date of purchase. Freight, packaging, labor or material charges to and from our customer service center is not covered under the warranty and is therefore the customer's responsibility.

The limited warranty does not cover this piece of furniture, cooler or accessory for commercial purposes, abusive use, damage by modification, freeze damage, rust, fading and issues caused by improper care.

For minor defects or missing parts/hardware, please contact customer service immediately upon purchase. Please do not return product to the store unless the product is irreparable. A customer service agent may help determine whether the damage is reparable and will provide further instructions.

For returns and refunds, please refer to your local store return policy with proof of purchase.

Proof of purchase (dated register receipt) will be required for warranty claims.

The use of power tools will void this warranty.

PROPER CARE INSTRUCTIONS

If left untreated, wood will naturally weather. During long periods of non-use, store furniture in covered and dry place. For the least maintenance, place your furniture, cooler, or accessory under a covered area.

To preserve and maintain the original finish of this furniture, a natural tung/linseed/Danish oil (with stain), which can be found at your local hardware store, should be applied. Please note the furniture has been stained and oiled before being packaged. If the wood is not maintained, the wood will naturally gray in color.

Remove the furniture completely from sunlight prior to applying oil. Apply generously and remove any excess oil with cloth. Frequency of the application of oil depends on exposure to the extremities of the outdoors.

Customer Service may be reached Monday through Friday from 9:00a.m. to 5:00p.m. CST.

HELP@UGSCO.COM OR 1-877-87LEIGH (53444)



**DISTRIBUTED BY:
UNITED GENERAL SUPPLY CO., INC.
HOUSTON, TX 77036**

www.LeighCountry.com