

FS Uptown 3PC Chat Set - Chat Chair Assembly Instructions


Step 1: Remove protective wrapping and lay all parts on floor. Identify all parts packed in carton against attached parts list.

Step 2: Attach seat bucket (A) to the base (B) as shown in Diagram, using Bolt (C), steel plate (I), Washer (D,E), Nut (F), Bolt cover (G) and Nut cover (H).

Step 3: Make sure all bolts are aligned properly and tightened securely. Then place bolt covers over bolts and nut covers over nut.

Note: When assembly chair together, loosely thread bolts into all attachment points first to make sure all parts and bolts fit in proper position. Afterwards, go back and securely tighten all bolts accordingly.

It is user's responsibility to ensure all bolts are tightened securely before turning chair to upright position and using chair.

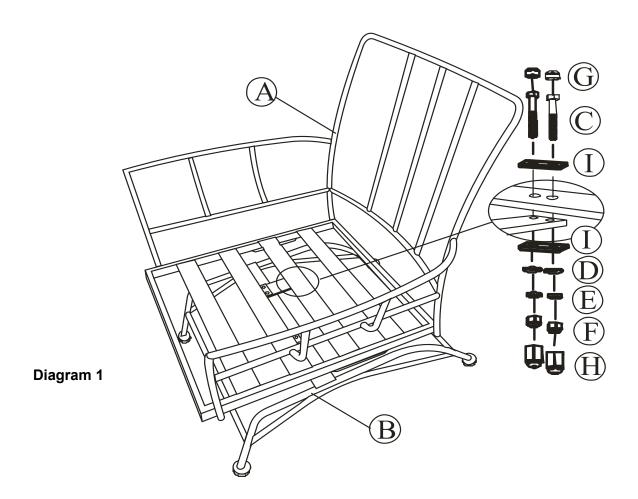

Parts List:

Ref	Part Name	Part Image	Qty	Ref	Part Name	Part Image	Qty
A	Seat Bucket		1	F	Nut		4
В	Chair Base		1	G	Bolt Cover		4
С	Bolt		4	н	Nut Cover		4
D	Washer		4	I	Steel Plate		4
E	Washer		4	J	Hex Wrench		1

1 YEAR LIMITED WARRANTY

This product is warranted for 1 year against any defects in material and workmanship. If defective, the product will be repaired or replaced free of charge. Simply provide proof of purchase and return the product to your placem of purchase. Normal wear or damage due to abuse, mishandling, or unauthorized repairs is not covered. The warranty does not apply to accessories. This warranty gives you specific legal rights and you may have other rights which vary from state to state.



WARNING: This product can expose you ro chemicals including Lead which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P6SWarnings.ca.gov.

Manufactured for and distributed by True Value® Company Chicago, IL 60631-3505 ©2019 True Value Company

Four Seasons Courtyard® is a trademark of the True Value Company Made in China