


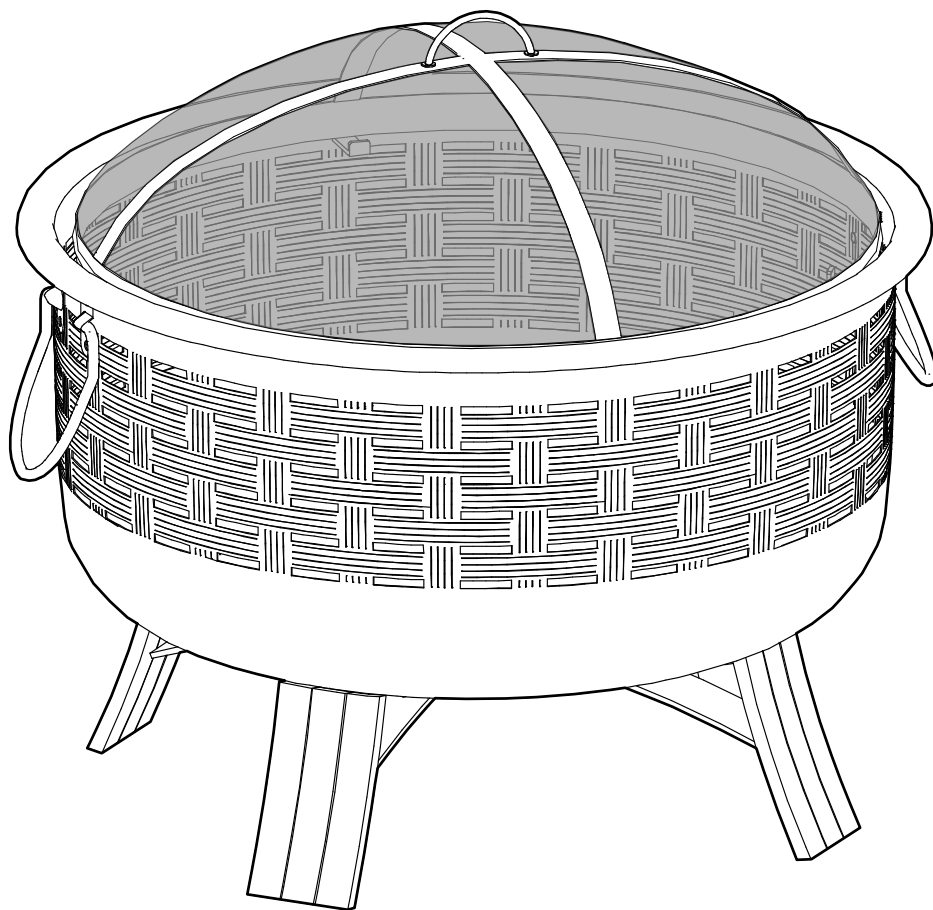

25" FIREGLOW FIRE PIT



WARNING: FUELS USED IN WOOD OR CHARCOAL BURNING APPLIANCES, AND THE PRODUCTS OF COMBUSTION OF SUCH FUELS, CAN EXPOSE YOU TO CHEMICALS INCLUDING CARBON BLACK, WHICH IS KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER, AND CARBON MONOXIDE, WHICH IS KNOWN TO THE STATE OF CALIFORNIA TO CAUSE BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM. For more information go to: www.P65Warnings.ca.gov



WARNING: THIS PRODUCT CAN EXPOSE YOU TO CHEMICALS, INCLUDING DEHP, WHICH IS KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER, BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM. For more information go to: www.P65Warnings.ca.gov

Assembly and Use Instructions

TRUE VALUE ITEM #

258892

MANUFACTURER ITEM #

26212

VER. 1, 10/14/2019



PLEASE READ ALL RULES FOR SAFE OPERATION AND HELPFUL HINTS BEFORE USING.



**READ FIRST! RULES FOR THE
FIREGLOW OUTDOOR FIRE PIT
SAFE OPERATION.**

- THIS FIRE PIT IS FOR OUTDOOR USE ONLY!
- USE ONLY ON BRICK, CONCRETE, STONE OR OTHER MASONRY SURFACES!
- DO NOT USE ON LAWNS, WOODEN DECKS, COMPOSITE DECKS, ASPHALT OR ANY COMBUSTIBLE SURFACE.
- KEEP THE FIRE PIT A MINIMUM OF 10 FT. AWAY FROM BUILDINGS, STRUCTURES, ANY FLAMMABLE ITEMS AND VEHICLES.
- NEVER USE UNDER LOW HANGING TREE BRANCHES, TRELLIS, OVERHANGS OF ANY KIND INCLUDING COVERED PORCHES.
- **WARNING!** NEVER USE GASOLINE, ALCOHOL OR VOLATILE FLUIDS TO START OR RESTART FIRES.
- DO NOT USE THE OUTDOOR FIRE PIT WHILE IMPAIRED BY ALCOHOL OR ANY OTHER SUBSTANCE.
- FOR LONGER PRODUCT LIFE, KEEP FIRES TO A RESPECTABLE SIZE, DO NOT OVERLOAD.
- DO NOT THROW FIREWOOD INTO THE FIRE PIT, ADD FIREWOOD BY CAREFULLY PLACING INTO THE FIREBOWL.
- THE OUTDOOR FIRE PIT IS FOR ADULT USE ONLY.
- ADULTS NEED TO KEEP WATCH AND SUPERVISE CHILDREN AND PETS WHEN AROUND THE FIRE PIT DURING USE.
- AVOID BEHAVIOR THAT COULD CAUSE THE FIRE PIT TO TIP OVER.
- KEEP LOOSE CLOTHING AWAY.
- DO NOT LEAVE UNATTENDED AT ANY TIME WHILE IN USE.
- DO NOT MOVE THE FIRE PIT DURING USE.
- DO NOT USE IN WINDY CONDITIONS!
- DO NOT OVERLOAD OR USE FOR BURNING GARBAGE.
- USE CAUTION WHEN TENDING THE FIRE, AS SURFACES WILL BECOME VERY HOT WHILE IN USE.
- ALWAYS USE THE SPARK GUARD DURING USE.
- USE MITTENS OR GLOVES WITH THE POKER TO REMOVE THE SPARK GUARD, THE SPARK GUARD WILL BECOME VERY HOT!
- USE CAUTION WHEN REMOVING THE SPARK GUARD, AS HOT STEAM OR A FLARE UP COULD CAUSE BURNS.
- BEFORE EACH USE MAKE SURE THE FIRE PIT IS IN GOOD WORKING CONDITION.
- USE CAUTION AFTER THE FIRE HAS BEEN EXTINGUISHED, SURFACES WILL REMAIN HOT FOR SOME TIME.
- THE FIRE PIT MUST BE COMPLETELY COOLED OFF AND ALL EMBERS MUST BE EXTINGUISHED BEFORE ANY COVER CAN BE USED.
- CHECK LOCAL LAWS AND CODES BEFORE USING.



25" FIREGLOW FIRE PIT




WARNING!

CARBON MONOXIDE HAZARD!

BURNING WOOD OR CHARCOAL PRODUCES CARBON MONOXIDE, WHICH HAS NO ODOR AND CAN CAUSE DEATH IF BURNED IN ENCLOSED AREAS. NEVER BURN WOOD OR CHARCOAL INSIDE HOMES, VEHICLES, TENTS OR ANY OTHER ENCLOSED AREAS.

four seasons
COURTYARD®
25" FIREGLOW FIRE PIT

TOOLS REQUIRED

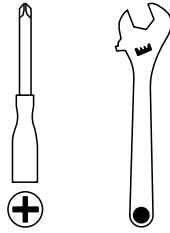


A Phillips or plain screwdriver and an adjustable wrench are needed for assembly.

Assembly time: 10 minutes


PARTS LIST

When unpacking the Fireglow from the carton, make sure you find and become familiar with all the parts listed below. Use caution as some parts may have sharp edges.

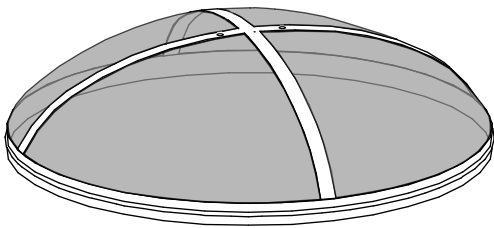


A

 (1) SPARK GUARD




F

(1) POKER

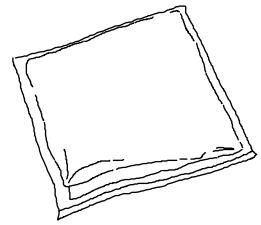


L

(1) COVER

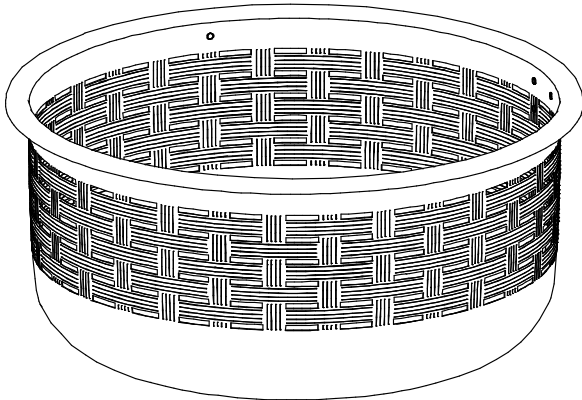

C

 
(1) FIREBOWL



x 3


M

 (3) PINS



R


(1) SPARK GUARD HANDLE
(HEXNUTS ARE PRE-ASSEMBLED TO THE HANDLE)

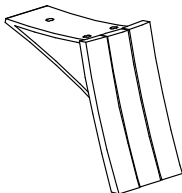

x 4

E

(4) LEGS

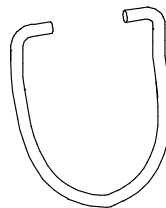

x 2

S

(2) FIREBOWL HANDLES



x 4


T

(4) FIREBOWL HANDLE BRACKETS



25" FIREGLOW FIRE PIT


HARDWARE LIST

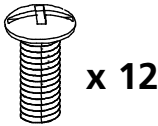

x 12

V

 (12) M6 x 15MM BOLTS



x 11

X

(11) M6 x 10MM BOLTS



x 23

Y

(23) M6 WASHERS



x 11

Z

(11) M6 FLANGE HEXNUTS

FIREGLOW ASSEMBLY INSTRUCTIONS

STEP 1

ASSEMBLE THE LEGS

Take each of the (4) legs [E] and assemble them to the firebowl [C] as shown using (12) 15MM bolts [V] and (12) washers [Y]. Tighten securely but do not over tighten or the porcelain can be damaged.

STEP 2

ASSEMBLE THE FIREBOWL HANDLES

Assemble the firebowl handles [S] to the firebowl using (2) brackets [T] per handle. Use (4) 10MM bolts [X], (4) washers [Y] and (4) hexnuts [Z] per handle. Assemble as shown with the handle angled outward.

STEP 3

ASSEMBLE THE PINS


Take each of the (3) pins [M] and assemble them to the firebowl [C] as shown using (3) 10MM bolts [X], (3) washers [Y] and (3) hexnuts [Z]. Tighten securely but do not over tighten or the porcelain can be damaged.

STEP 4


ASSEMBLE THE SPARK GUARD HANDLE AND PLACE SPARK GUARD

Assemble the spark guard handle [R] to the spark guard [A] using the pre-assembled hexnuts. Place the spark guard [A] onto the pins [M]. The spark guard keeps sparks contained in the fire pit. PLEASE USE at all times.

DO NOT RETURN PRODUCT TO THE STORE. IF YOU HAVE QUESTIONS OR HAVE TROUBLE WITH ASSEMBLY, PLEASE CALL 1-800-321-3473 FOR ASSISTANCE.

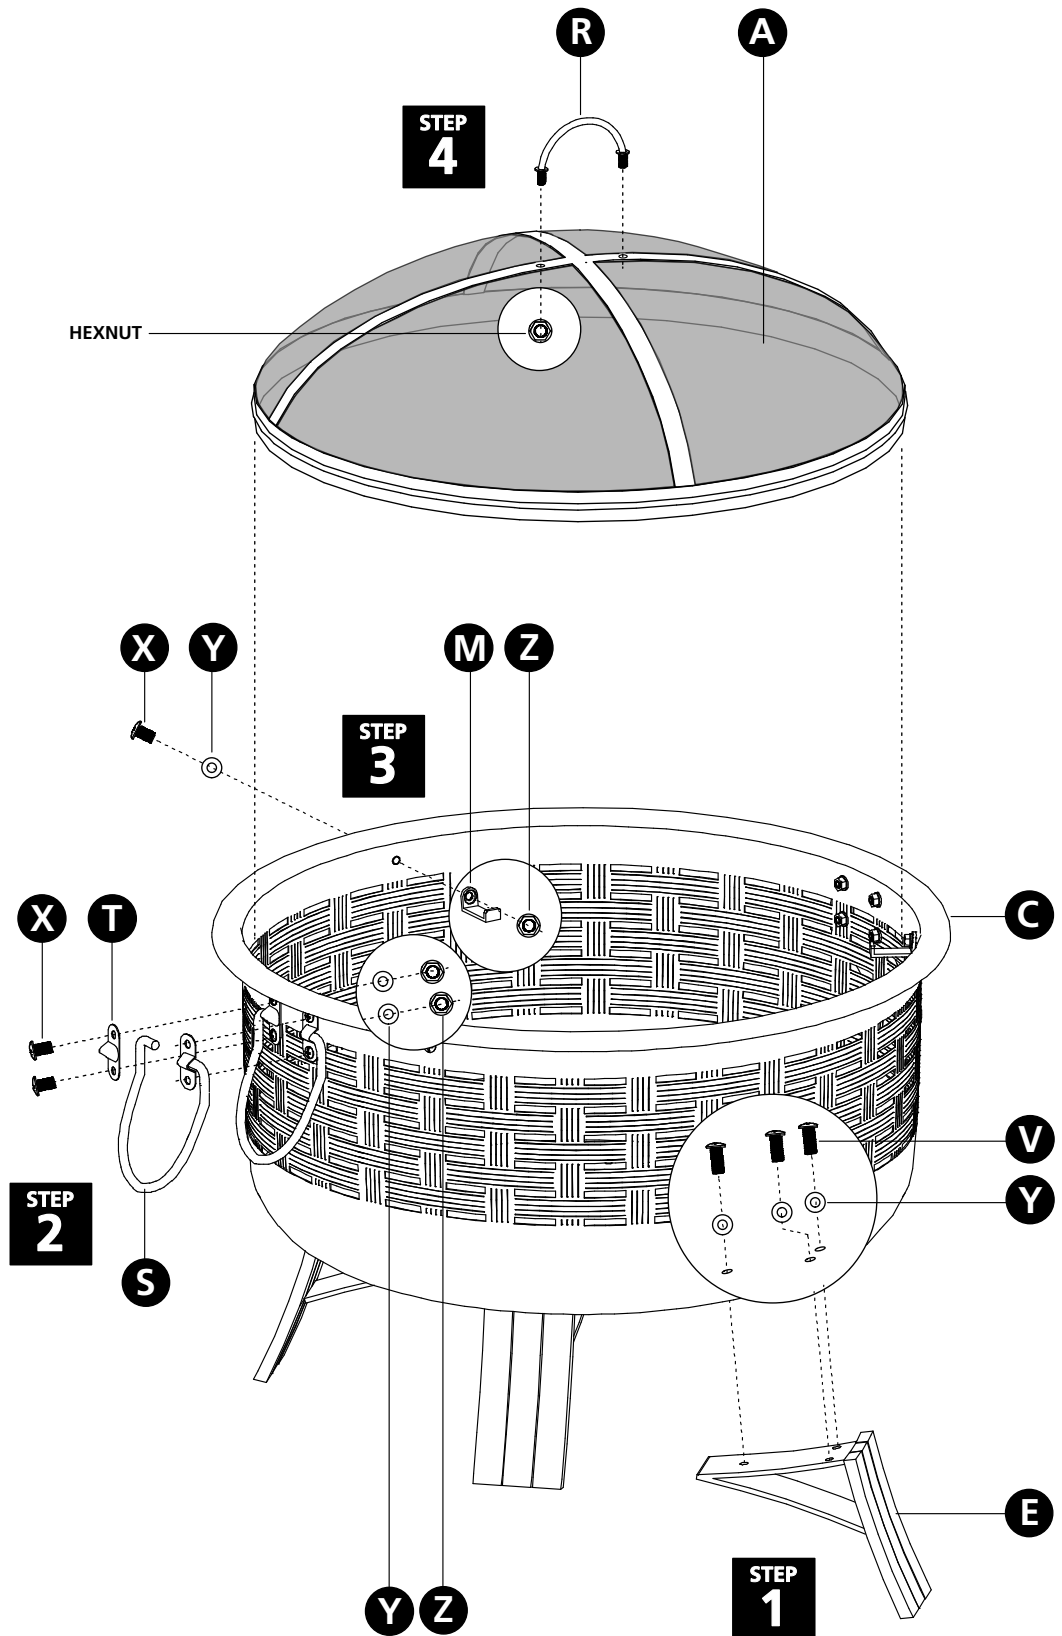

FIREGLOW USE INSTRUCTIONS

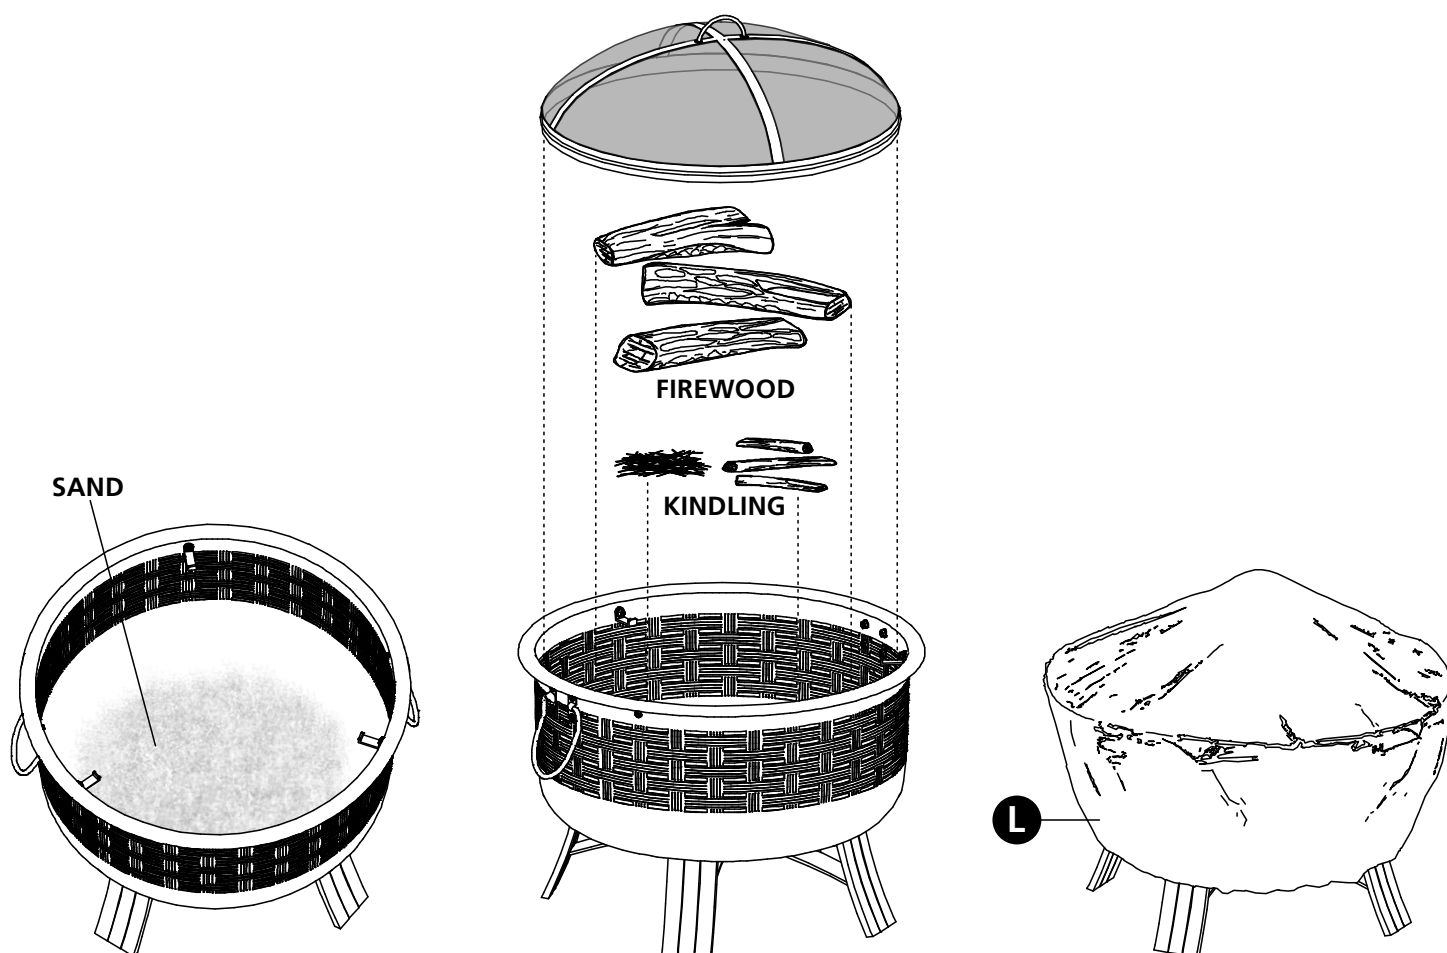

STEP 1

ADD SAND

Before using, add a 1-1.5 in. layer of sand or about 5 lbs. (size wise, its the same amount as a 5 lb. bag of sugar) to the bottom of the firebowl. This will help neutralize the corrosive nature of the ashes and help radiate the heat upwards.

STEP 2

ADD FUEL

Add up to 5 lbs. of kindling and firewood to the firebowl. Use paper or firestarter under the kindling and light with a match. Add more firewood as needed. The capacity of the fire pit is 5 lbs. of fuel.

ADD COVER

After using, use cover [L] only after the fire is completely extinguished and the fire pit is completely cool to the touch.

FIREGLOW USE INSTRUCTIONS



USAGE TIPS!

The firebowl has a porcelain finish which is very durable and will provide excellent resistance to heat. Proper care will provide many seasons of carefree use. Follow these tips for long life.

Do not drop or throw firewood in the firebowl, this will cause the porcelain to chip and could cause hot embers to fly out of the firebowl.

Avoid excessive poking, rubbing or striking to the porcelain finish as it will cause chipping.

If the porcelain does happen to chip, use caution as the chips and the chipped area can be very sharp and can cause injury.

Do not pour water directly onto a hot firebowl, this will cause the porcelain to chip, craze or pit. IF THERE IS AN EMERGENCY, USE WATER IF NEEDED!

Do not overfill the fire pit.

Always use on level surface.

Avoid behavior that could cause the fire pit to tip over.

Keep loose clothing away.


Adults need to keep watch and supervise children and pets when around the fire pit during use.

For longer product life, keep fires to a respectable size, do not overload.





25" FIREGLOW FIRE PIT

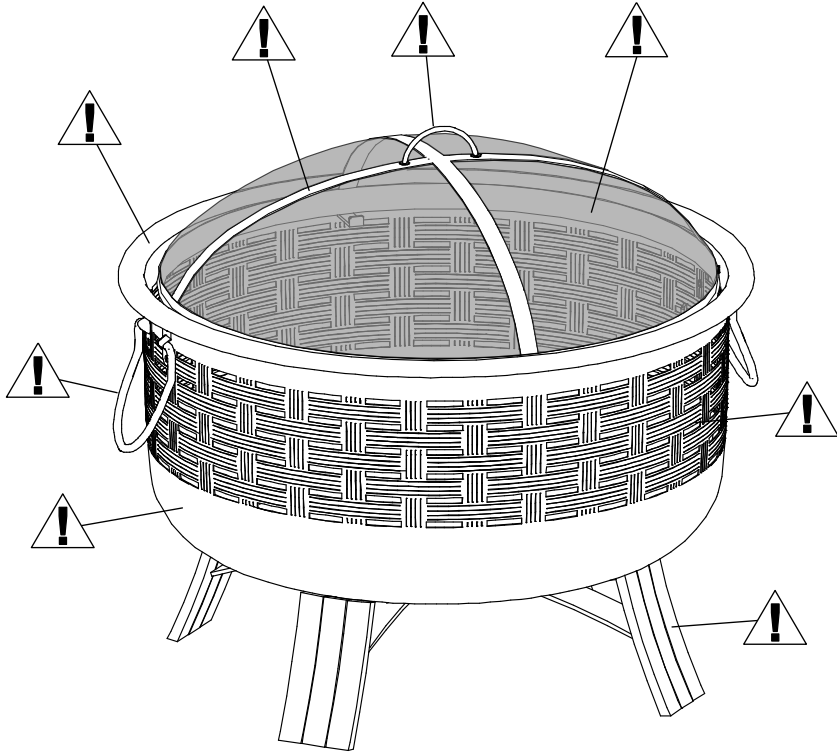**HOT SURFACES DURING USE!****⚠ WARNING!**

NEVER USE GASOLINE,
ALCOHOL OR VOLATILE
FLUIDS TO START OR
RESTART FIRES.

**⚠ WARNING!**

HOT SURFACES DURING
USE! USE MITTENS, POKER
OR GLOVES ON THESE
PARTS.

CLEANING

For best results, the fire pit should be cleaned after every use. Make sure fire pit is cool and all embers are extinguished before cleaning.

If any remaining firewood needs to be removed, use poker or shovel to remove. Any sand can be reused.

Dispose of ashes in proper receptacle only after ashes have cooled. Do not dump ashes where a fire can be started.

If the fire pit needs to be cleaned, use a mild soap and water with a soft rag. Dry thoroughly to prevent rust. Use caution as some parts can be sharp.

Occasionally, the fire pit finish will need to be refinished. Use a high quality, high heat paint to renew the finish.

**HELPFUL HINTS:**

- KEEP THE FIRE PIT OUT OF THE WEATHER AND ELEMENTS.
- STORE THE FIRE PIT IN A DRY LOCATION OUT OF THE WEATHER.
- DO NOT LEAVE OUTDOORS WHERE THE FIREBOWL CAN COLLECT WATER.
- DO NOT DUMP ASHES WHERE A FIRE CAN BE STARTED.
- DISPOSE OF ASHES IN PROPER RECEPTACLE ONLY AFTER ASHES HAVE COOLED.
- USE ANY COVER ONLY AFTER THE FIRE PIT IS COMPLETELY COOL TO THE TOUCH.
- STORE THE FIRE PIT IN AN AREA SO THAT IT WON'T BE PRONE TO TIPPING OVER AND BEING A HAZARD.

Congratulations on your purchase of the Fireglow Fire Pit! At Landmann USA, we strive to provide you with an easy to use, easy to assemble product. However, in the unlikely event your package should have a missing or defective part, please contact us at:


customerservice@landmann-usa.com

-OR-

1-800-321-3473 M-F 8-5 ET.

Proof of purchase may be required. Thank you!

AVAILABLE ACCESSORIES FOR FIREGLOW

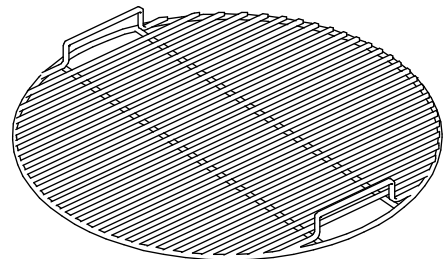**PORCELAIN COOKING GRATE**


MODEL 29200
Porcelain cooking
grate with handles.

Please visit our website at:
www.landmann.com/us

-OR-

Call customer service toll free at:
1-800-321-3473

Manufactured for and distributed
by True Value® Company
Chicago, IL 60631-3505
Four Seasons Courtyard®
is a trademark of the
True Value Company
Made in China

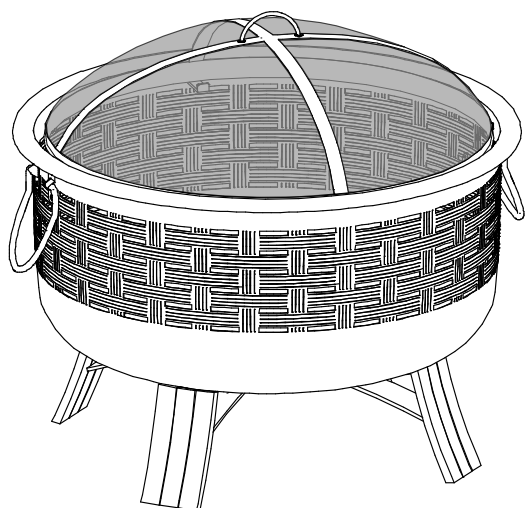

1 YEAR LIMITED WARRANTY


1 YEAR LIMITED WARRANTY

This product is warranted for 1 year against any defects in material and workmanship. If defective, the product will be repaired or replaced free of charge. This limited warranty is made exclusively to the original customer presenting proof of purchase. Simply provide proof of purchase and return the product to your place of purchase.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligence, abuse, misuse, alteration, improper installation, improper maintenance or failure to perform normal maintenance, failure to follow the Fireglow instructions or any use contrary to operating instructions. Furthermore, Landmann does not warrant in any way the paint finish of the product or cover damage or deterioration due to any normal or severe weather conditions or to any chemical exposure. These warranties do not cover surface scratches or heat damage, which is considered to be normal wear. These warranties exclude liability for any indirect, incidental consequential damages or loss of property of any nature.

This warranty is limited to non-commercial residential use only.

Product repair or replacement as provided under this warranty is your exclusive remedy. Landmann shall not be liable for any incidental or consequential damages or breach of any express or implied warranty on this product or any part thereof, except to the extent prohibited by applicable law. Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitation on how long an implied warranty lasts, therefore, the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary, from state to state.

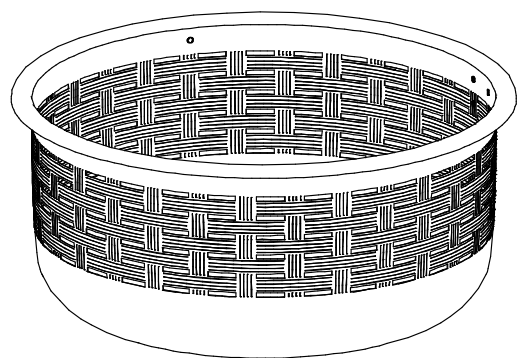

5 YEAR LIMITED WARRANTY

5 YEAR LIMITED WARRANTY

The porcelain firebowl is warranted for 5 years against rust through.

If at anytime the firebowl rusts through the metal and porcelain within 5 years after the date of purchase, the firebowl will be replaced free of charge. Simply provide proof of purchase with date and photographic proof of the defect. One replacement per customer per product is allowed.

This warranty does not cover normal wear including chipping, cracking, crazing, pitting or surface rust from porcelain breakage with metal exposure.

For warranty service, please call 1-800-321-3473, Hours of Operation: Monday-Friday 8 am to 5 pm ET or customerservice@landmann-usa.com. Any returned products or parts that are shipped must be returned postage prepaid unless otherwise noted.