



Steel Fire Pit



Item #: 227788
Model #: SRFP2822

Assembly Instructions & User's Manual



Questions, problems, missing parts? Before returning to your retailer, call our customer service department at 1-866-814-0585, 8 a.m. - 8 p.m., EST, Monday - Friday.
Email :customerservice@shinerichgroup.com

Safety Information

WARNING:


- FOR OUTDOOR USE ONLY.
- Do not use the firepit indoors. Carbon monoxide fumes, due to lack of ventilation, can cause death.
- Do not use gasoline or kerosene to start fires in the firepit. Keep all flammable liquids away from the firepit.
- This unit is designed to burn charcoal and untreated wood only. Fill the bottom of the bowl with sand until the surface of sand is 0.2 inches below the grid.
- Do not use under or on combustible structures/surfaces including wooden decks.
- Use protective gloves and long-handled tools with this firepit.
- Dispose of packaging materials properly.
- Keep children away from hot firepit.
- Firepit remains very hot for a period of time after using.
- Be sure firepit is cool before attempting to move it.
- The handles of the tools may become hot during and after use. The firepit should be placed no closer than 24 in. from walls during use.

CAUTION: Assemble the firepit on a non-abrasive surface.

CALIFORNIA PROPOSITION 65 WARNING

This product can expose you to chemicals including carbon monoxide, which is known to the State of California to cause birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

Package Contents

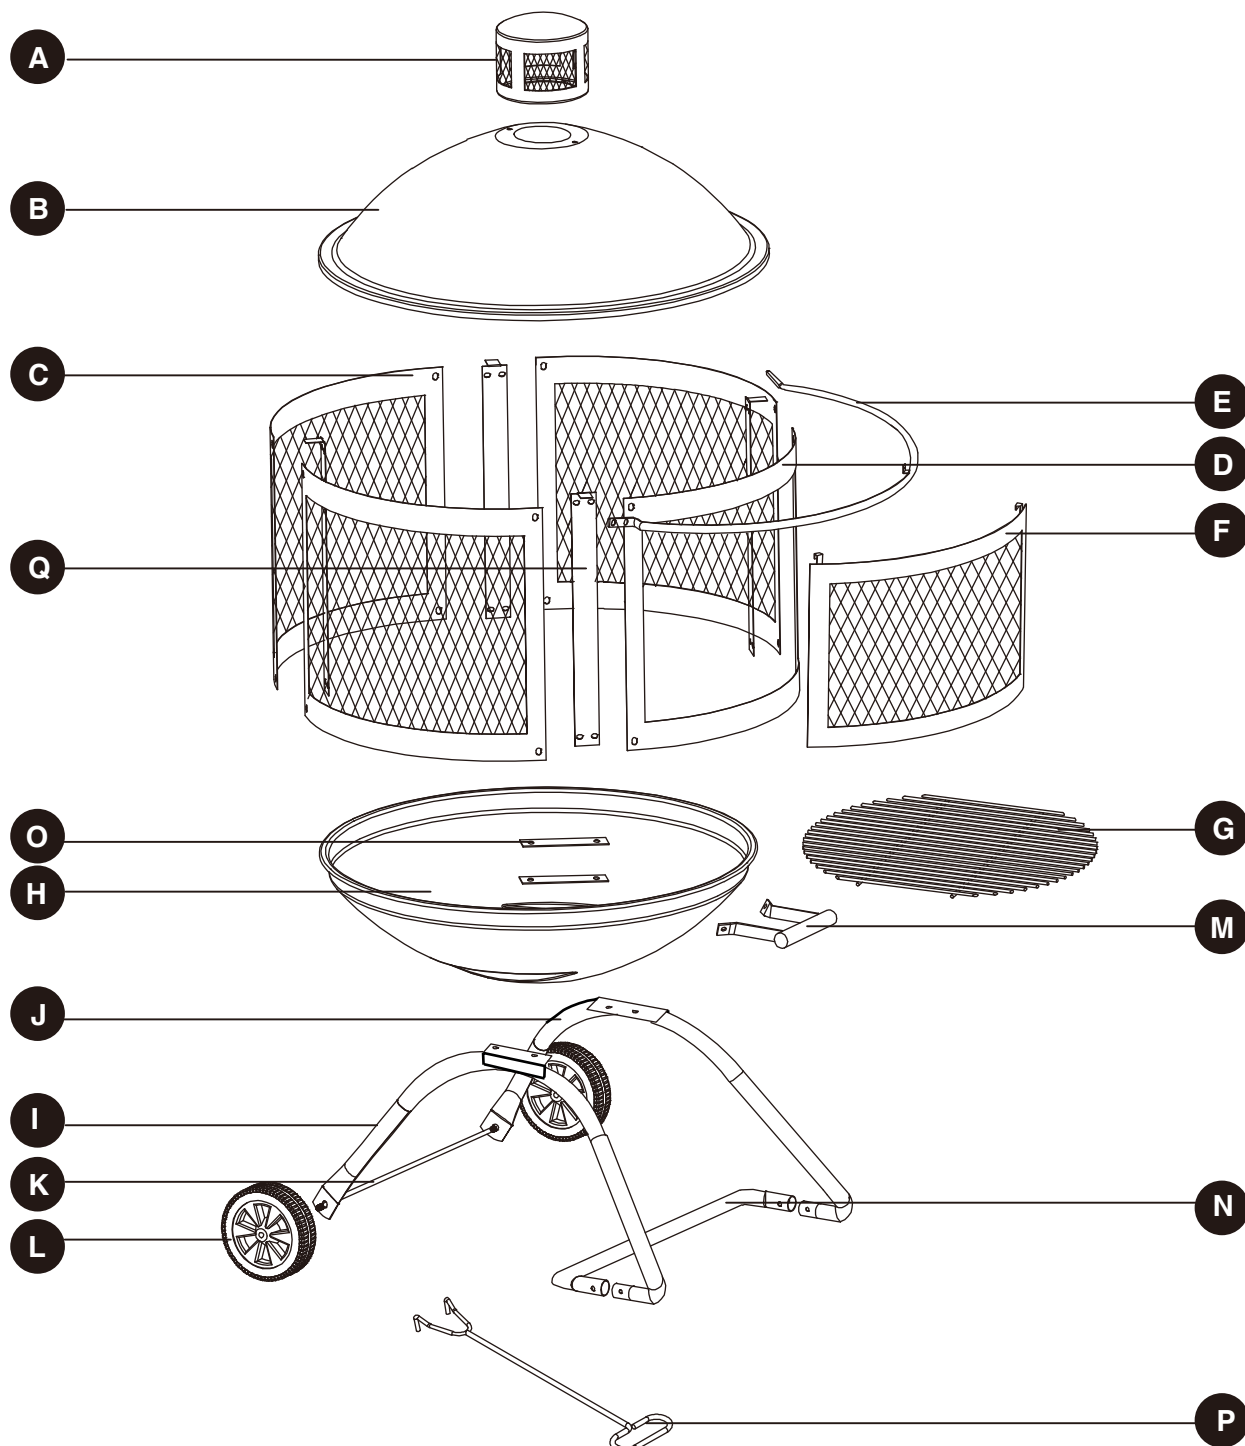



Part List

Part	Description	Quantity
A	Chimney cap	1 pc
B	Top bowl	1 pc
C	Screen	3 pcs
D	Doorframe	1 pc
E	Slide rail	1 pc
F	Sliding door	1 pc
G	Charcoal grid	1 pc
H	Bottom bowl	1 pc
I	Left leg tube	1 pc





 





Part	Description	Quantity
J	Right leg tube	1 pc
K	Axle	1 pc
L	Wheel	2 pcs
M	Handle	1 pc
N	U tube	1 pc
O	Fixing plate	2 pcs
P	Poker	1 pc
Q	Vertical bracket	4 pcs

Tools Required (Not included):

1	Adjustable open end wrench	
2	Screwdriver	

Hardware List

Please check the contents of the packaging to ensure all parts are included.

Part	Description	Quantity	Picture
AA	M6 x 40 bolt	2 pcs	
BB	M6 nut	23 pcs	
CC	D10 x 33 pin bush	2 pcs	
DD	M8 stop nut	2 pcs	
EE	M6 x 15 bolt	8 pcs	
FF	M6 x 12 bolt	13 pcs	
GG	D16 washer	6 pcs	
HH	M5 nut	2 pcs	
II	M5x 10 bolt	1 pc	
JJ	Paper washer	2 pcs	

Assembly Instructions

Choose a level location for assembly. Remove all parts from the packaging, and check for missing parts.

1


Connect U tube (N) to left leg tube (I) and right leg tube (J) with (2) M6 x 40 bolts (AA) and (2) M6 nuts (BB). Then take axle (K) through into two holes of leg tubes assembly.

Hardware Used

AA M6 x 40 bolt x 2



BB M6 nut x 2

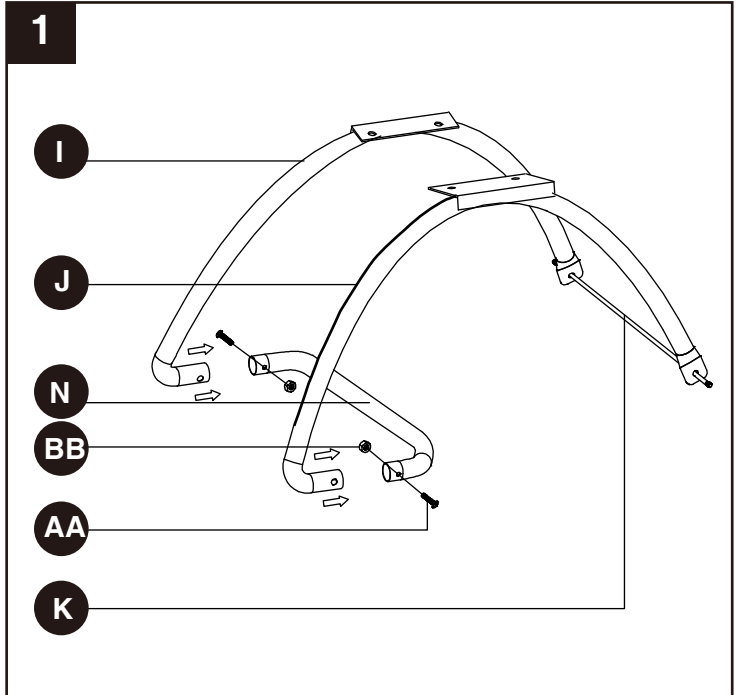

2


Fix two wheels (L) into axle (K) with (2) D10 x 33 pin bushes (CC) and (2) M8 stop nuts (DD).

Hardware Used

CC D10 x 33 pin bush x 2



DD M8 stop nut x 2

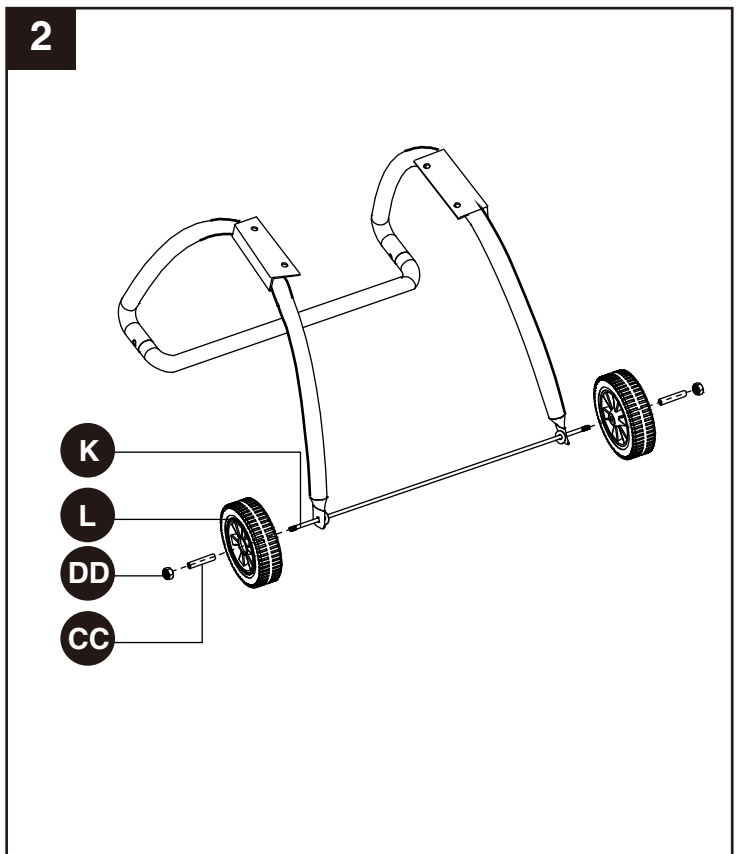



Assembly Instructions


Choose a level location for assembly. Remove all parts from the packaging, and check for missing parts.

3

Attach the bottom bowl (H) to legs assembly with (4) M6 x 15 bolts (EE), (2) fixing plates (O) and (4) M6 nuts (BB).

  Hardware Used





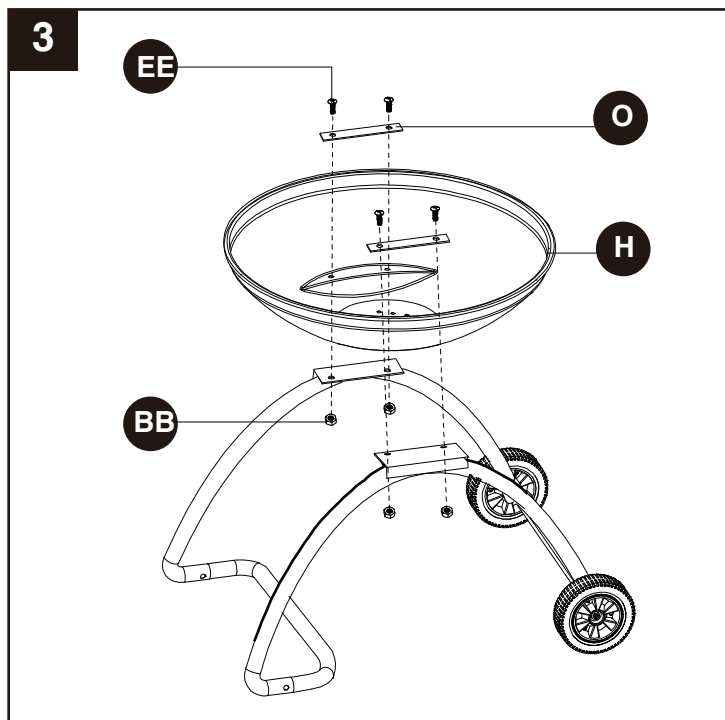BB	M6 nut		x 4
EE	M6 x 15 bolt		x 4




4

  Attach handle (M) to the bottom bowl (H) with (2) M6 x 12 bolts (FF), (2) D16 washers (GG), (2) paper washers (JJ), (2) D16 washers (GG) and (2) M6 nuts (BB).

Hardware Used

BB	M6 nut		x 2
FF	M6 x 12 bolt		x 2
JJ	Paper washer		x 2
GG	D16 washer		x 4

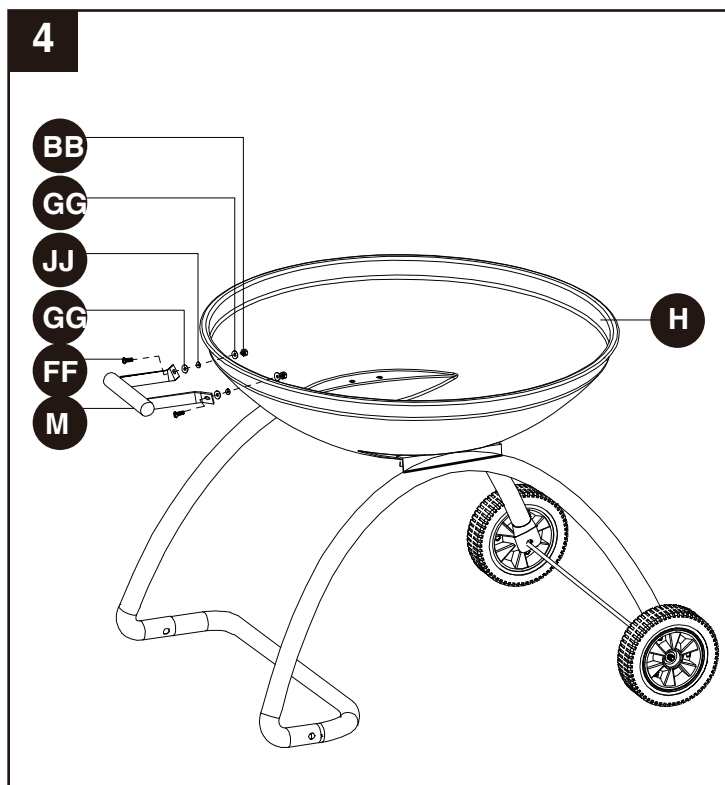


Assembly Instructions

Choose a level location for assembly. Remove all parts from the packaging, and check for missing parts.

5



Place charcoal grid (G) into bottom bowl (H).

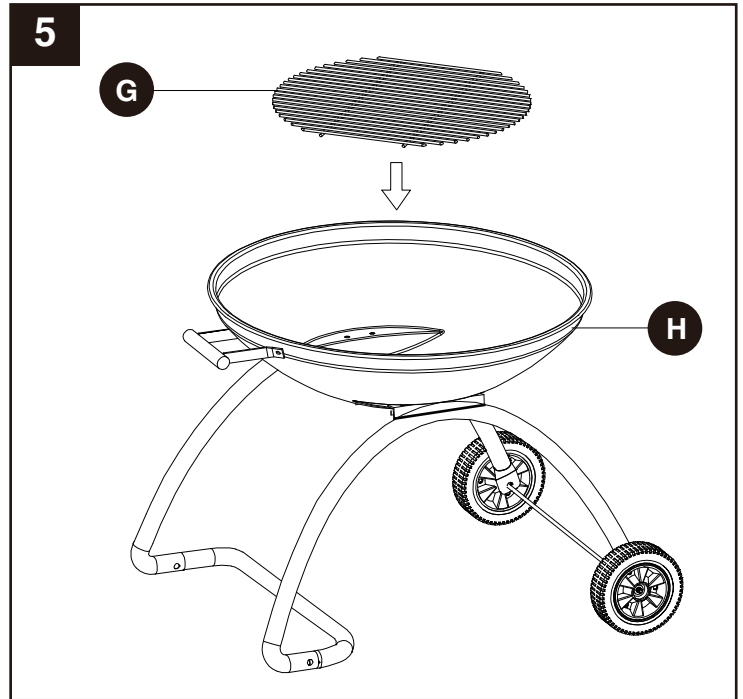


6

Connect two screens (C) with (1) vertical bracket (Q), (4) M6 x 12 bolts (FF) and (4) M6 nuts (BB).

  Hardware Used

BB	M6 nut		x 4
FF	M6 x 12 bolt		x 4

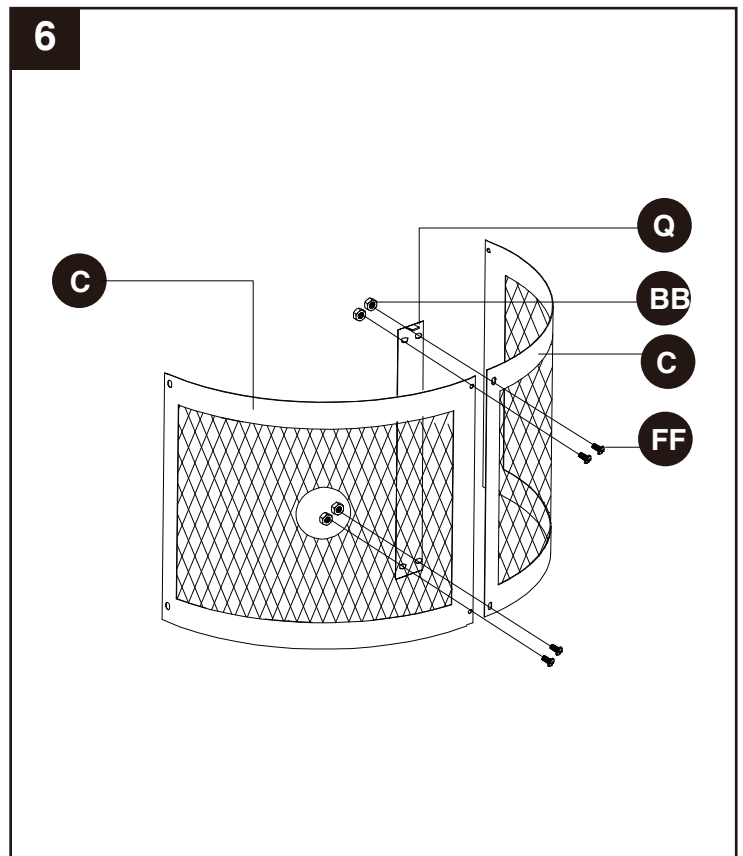


 

Assembly Instructions


Choose a level location for assembly. Remove all parts from the packaging, and check for missing parts.

7

Connect doorframe (D) and another screen (C) with (1) vertical bracket (Q), (3) M6 x 12 bolts (FF) and (3) M6 nuts (BB). Then attach slide rail (E) to upper-left hole on screen (C) and upper-right hole on vertical bracket (Q) with (1) M5 x 10 bolt (II) as illustrated.

Hardware Used

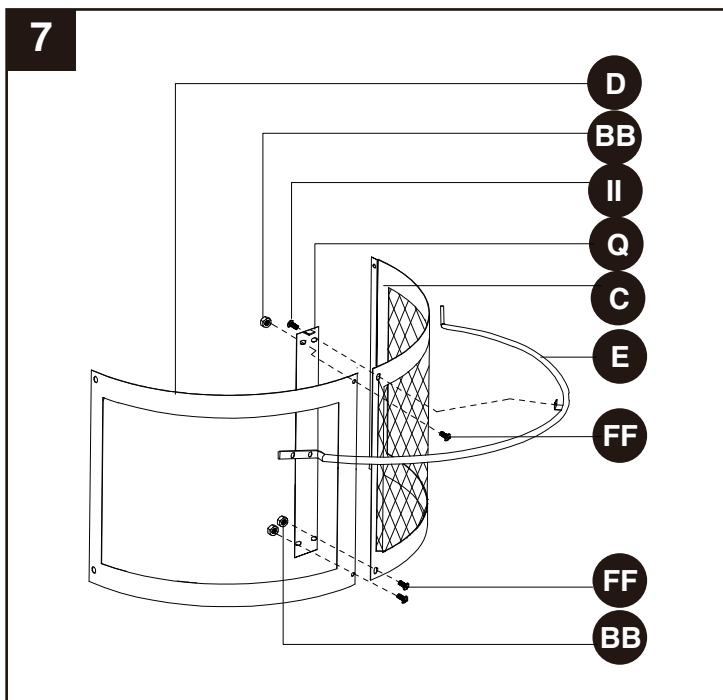


BB	M6 nut		x 3
FF	M6 x 12 bolt		x 3
II	M5 x 10 bolt		x 1




8

Connect screen assembly, doorframe assembly and slide rail (E) with (4) M6 x 15 bolts (EE) and (4) M6 x12 bolts (FF) and (8) M6 nuts (BB).

Hardware Used

BB	M6 nut		x 8
EE	M6 x 15 bolt		x 4
FF	M6 x 12 bolt		x 4

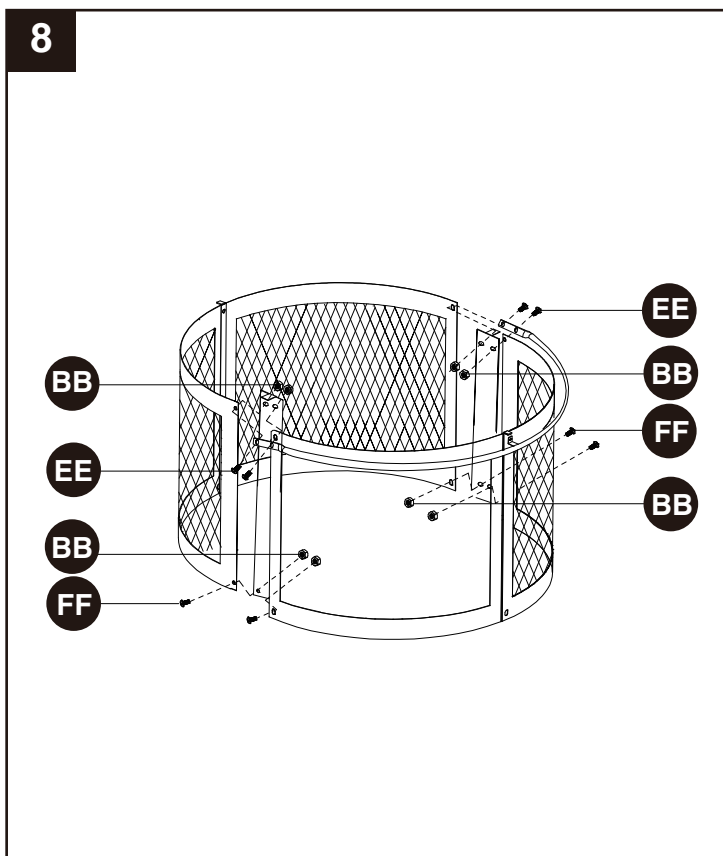


Assembly Instructions

Choose a level location for assembly. Remove all parts from the packaging, and check for missing parts.


9

Settle screen assembly into bottom bowl (H).

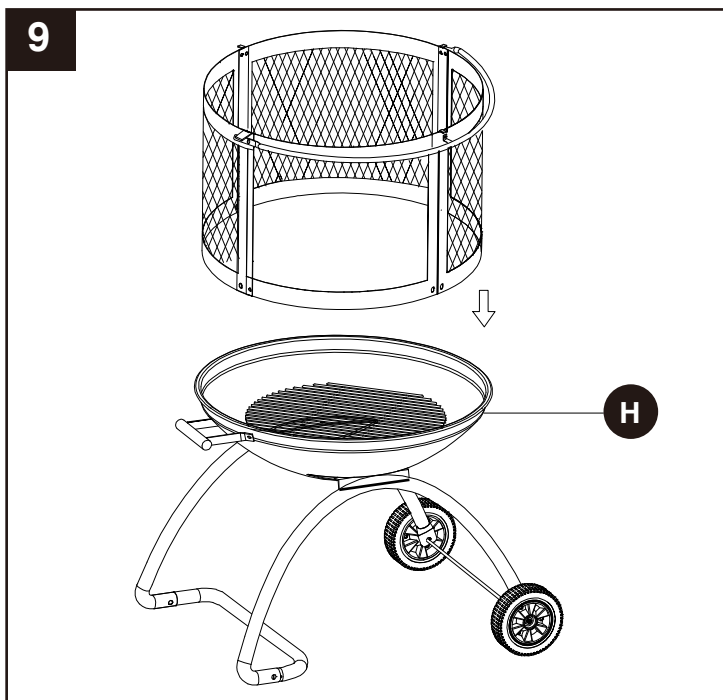

10

Hang the sliding door (F) onto slide rail (E) of screen assembly.

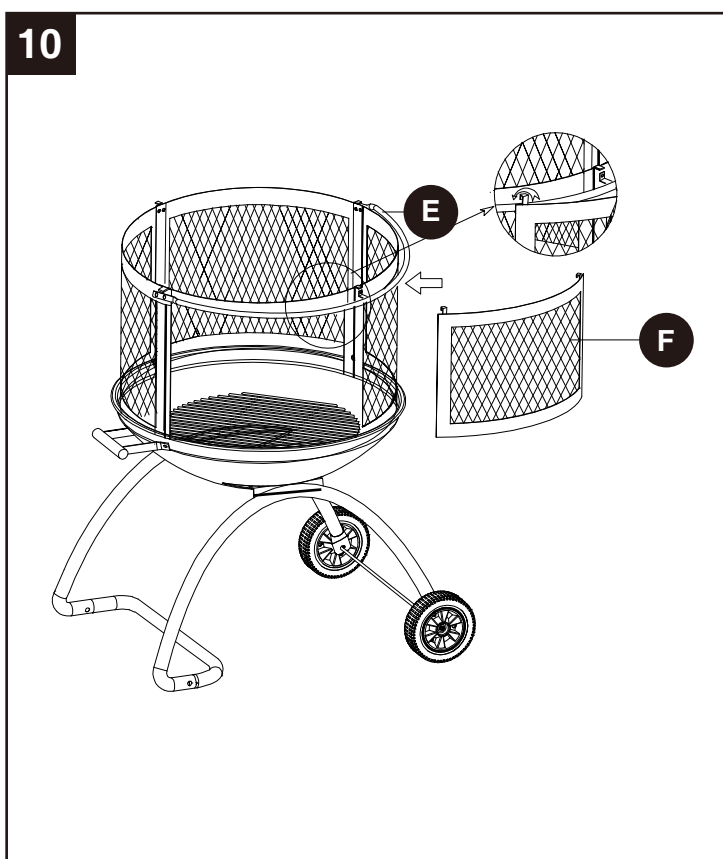

Assembly Instructions

Choose a level location for assembly. Remove all parts from the packaging, and check for missing parts.


11

Fix chimney cap (A) onto top bowl (B) with (2) pre-assembled bolts, (2) D16 washers (GG) and (2) M5 nuts (HH).

Hardware Used

GG	D16 washer		x 2
HH	M5 nut		x 2


11

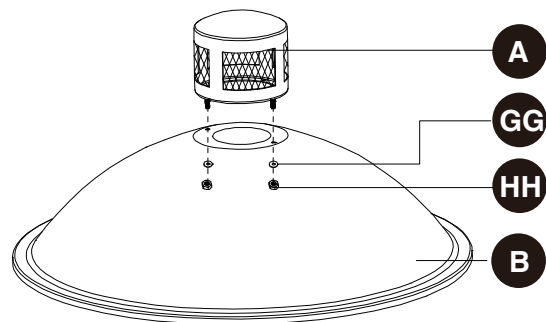

12

Place top bowl assembly onto screen assembly. Clip bracket into slot on the top bowl edge.

12

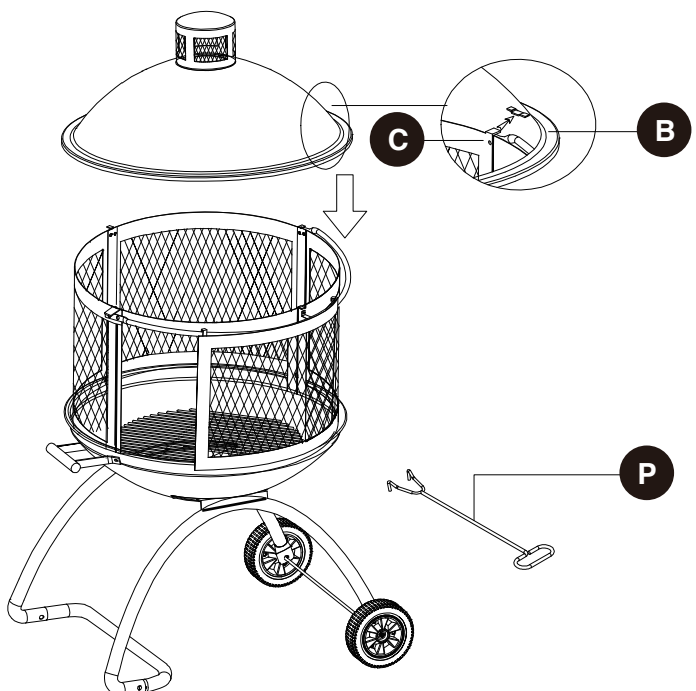

Care and Maintenance

Inspecting

Inspect this firepit on a regular basis to ensure product safety and longer product life.

DO NOT attempt to inspect this outdoor firepit until the fire is COMPLETELY out and cooled down.

- Check handles to make sure they are secure.
- Check components for any signs of damage or rust.
- If any component is damaged, do not operate until repairs are made.

Cleaning

Clean this outdoor firepit on a regular basis to promote safer use and longer product life.

Note: After repeated use, the finish may discolor slightly.

DO NOT attempt to clean this outdoor firepit until the fire is COMPLETELY out and cooled down.

DO NOT use oven cleaner or abrasive cleaners as they will damage this product.

DO NOT clean any part of this outdoor firepit in a self-cleaning oven as it may damage this finish.

- Wipe exterior surfaces with a mild dishwashing detergent or baking soda.
- For stubborn surfaces use a citrus-based degreaser and a nylon scrubbing brush.
- Rinse clean with water.
- Remove built-up creosote from components with a chimney cleaning product.

Storage

DO NOT move or store this outdoor firepit until the fire is COMPLETELY out and cooled down.

- Once the fire is out, coals are cold and outdoor firepit is cool to touch, remove ashes and properly dispose.
- Store assembled in a location away from children and pets.

Note: If you do not use a cover, store this outdoor firepit in a dry location to maximize product life.

Warranty Information

1 YEAR LIMITED WARRANTY

This product is warranted for 1 year against any defects in material and workmanship. If defective, the product will be repaired or replaced free of charge. Simply provide proof of purchase and return the product to your place of purchase. Normal wear or damage due to abuse, mishandling, or unauthorized repairs is not covered. The warranty does not apply to accessories. This warranty gives you specific legal rights and you may have other rights which vary from state to state.

GARANTÍA LIMITADA DE 1 AÑO

Este producto está garantizado por 1 año contra cualquier defecto de materiales y de mano de obra. Si está defectuoso, el producto será reparado o reemplazado de forma gratuita. Basta con proporcionar el comprobante de compra y devolver a su lugar de compra. El desgaste normal o daños causados por mal uso o manejo, o reparaciones no autorizadas no están cubiertos. Esta garantía le otorga derechos legales específicos y usted puede tener otros derechos que varían de estado a estado.

Manufactured for and distributed
by True Value® Company
Chicago, IL 60631-3505
©2019 True Value Company

Fabricado para y distribuido por
la empresa True Value® Company
Chicago, IL 60631-3505
©2019 True Value Company

Four Seasons Courtyard®
is a trademark of the
True Value Company
Made in China

Four Seasons Courtyard®
es una marca comercial de
True Value Company
Hecho en China



Need help?

call our toll free number at:

1 (866)-814-0585

e-mail us at:

Customerservice@Shinerichgroup.com