

Assembly Instructions

SKU# : 212278

Product Name: FS Chiminea Fire Pit

⚠️ WARNINGS:


- This fire bowl is intended for outdoor use only.
- This fire bowl is intended for burning wood logs only. Do not burn coal, leaves, or other combustible materials in the bowl.
- Not for use by children. Keep children and pets away from this fire bowl.
- When in use, the handle on the mesh cover can reach extremely high temperatures that can cause serious injury to an unprotected hand. Protective gloves and long-handled tools are recommended for use with this fire bowl.
- Never leave the burning fire bowl unattended, and always extinguish the fire completely before leaving the fire bowl.
- Do not use on a wooden deck or combustible surface such as grass, leaves, mulch, etc.
- Do not use fire bowl on heat-sensitive or combustible structures.
- Do not burn over 5 lbs untreated wood or fire logs in this fire pit.
- Check local fire regulations and municipal by-laws for information regarding the safe use of this product.
- Read all safety guidelines, warnings, instructions, and operating rules carefully before assembling and using this product.
- Some parts may contain sharp edges. Wear protective gloves if necessary during assembly and use.
- Fuels used in wood or charcoal burning appliances, and the product combustion of such fuels, contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

PARTS LIST

No.	PARTS	Qty
A	Handle	1
B	Chimney Cover	1
C	Chimney Flue	1
D	Chimney Top	1
E	Mesh Screen	1
F	Chimney Bottom	1
G	Stand	4
H	Tray	1
I	Poker	1


HARDWARE LIST

No.	Hardware	Qty
AA	M6*12mm Bolt	12
BB	M6*25mm Bolt	11
CC	M6 Nut	12

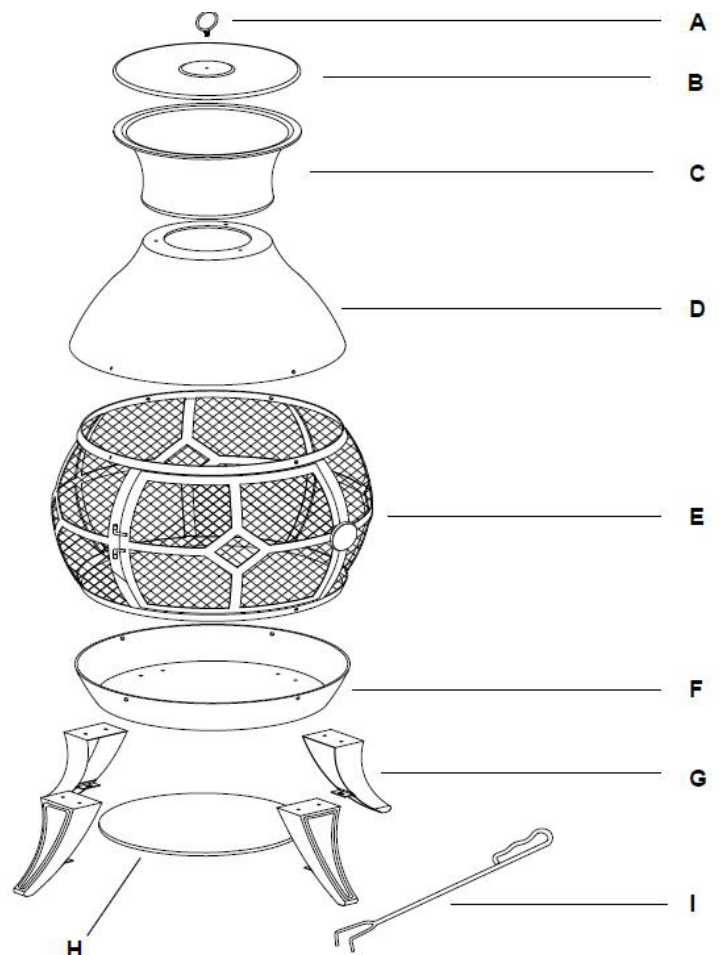


Note: You will need a screwdriver to complete the assembly.


Step 1: Insert the handle (A) into the hole of the chimney cover (B). Attach the handle (A) to the chimney cover (B) using a nut (CC). Securely tighten with an M6 wrench (not included).

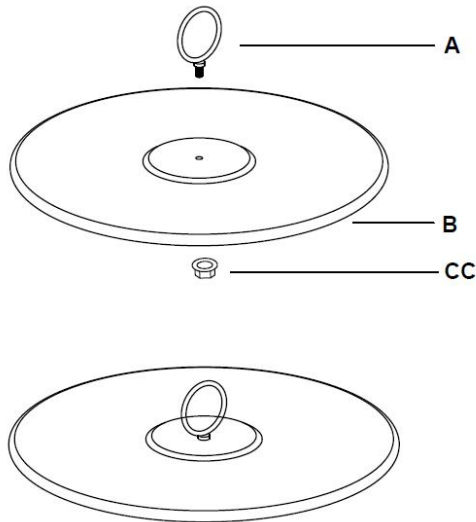


Step 2: Attach the stands (G) to the tray (H) using M6×12mm bolts (AA). Hand tighten the bolts (AA). Do not over-tighten.

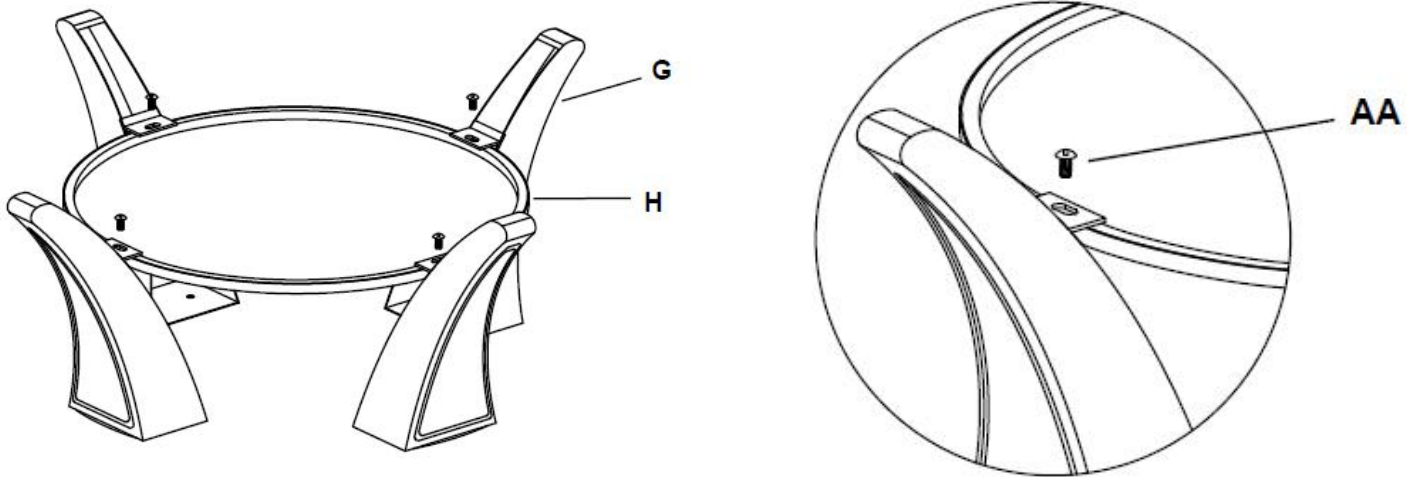


Step 3: Attach the chimney bottom (F) to the stand (G) using M6×12mm bolts (AA). Securely tighten each bolt (AA) with a Philips screwdriver (not included).

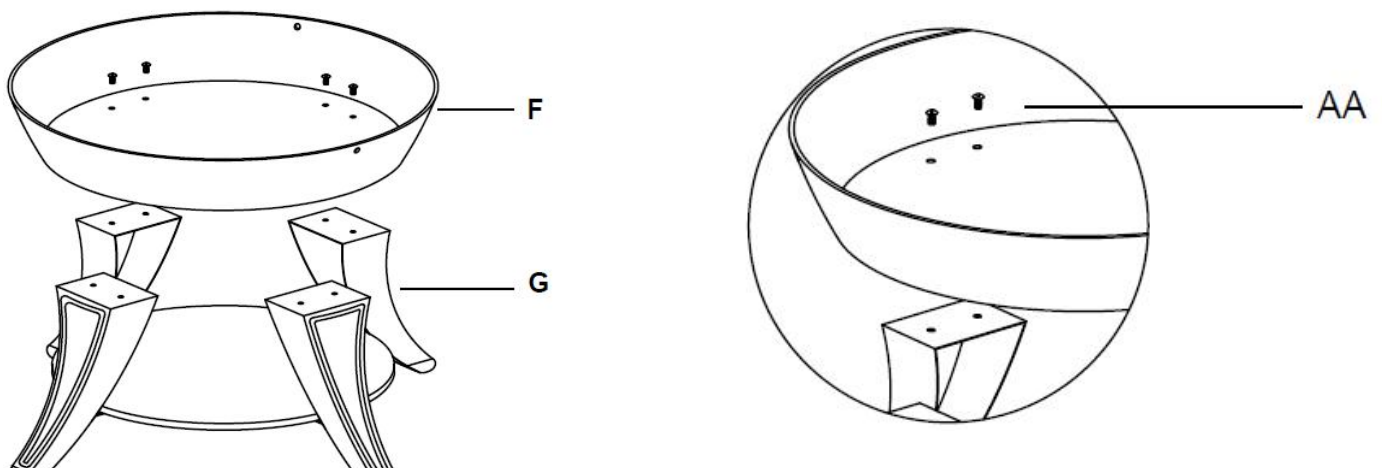


Step 4: Attach the mesh screen (E) to chimney bottom (F) using M6×25mm bolts (BB) and M6 nuts (CC). Securely tighten each bolt (BB) and nut (CC) with an M6 wrench and Philips screwdriver (not included).

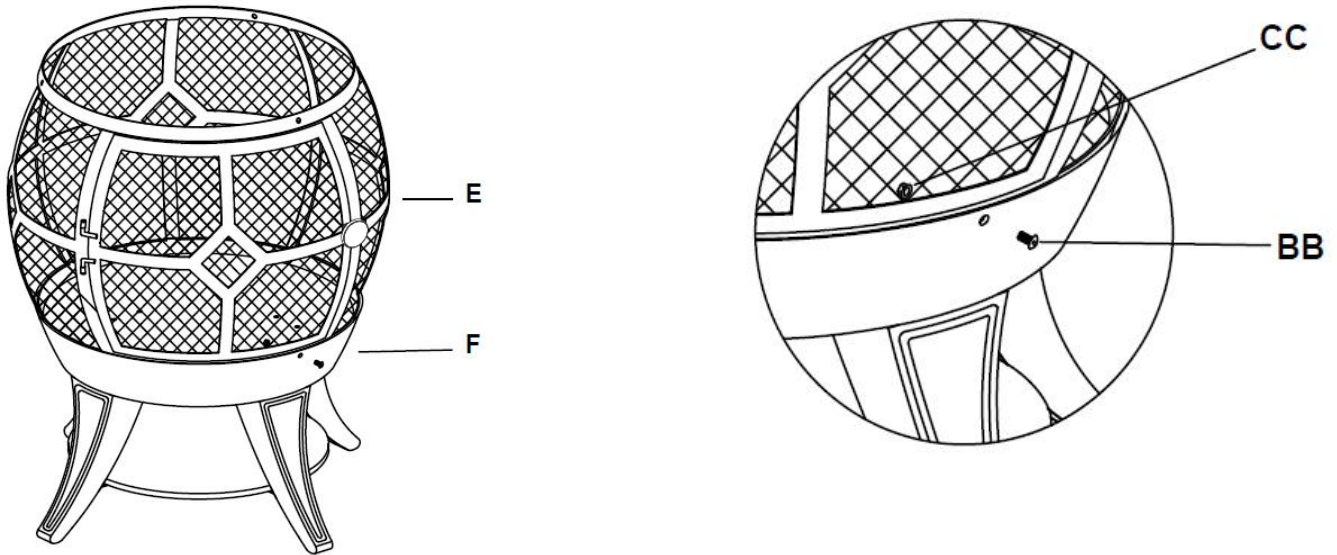

Step 5: Attach the chimney top (D) to the mesh screen (E) using M6×25mm bolts (BB) and M6 nuts (CC). Securely tighten each bolt (BB) and nut (CC) with an M6 wrench and Philips screwdriver (not included).

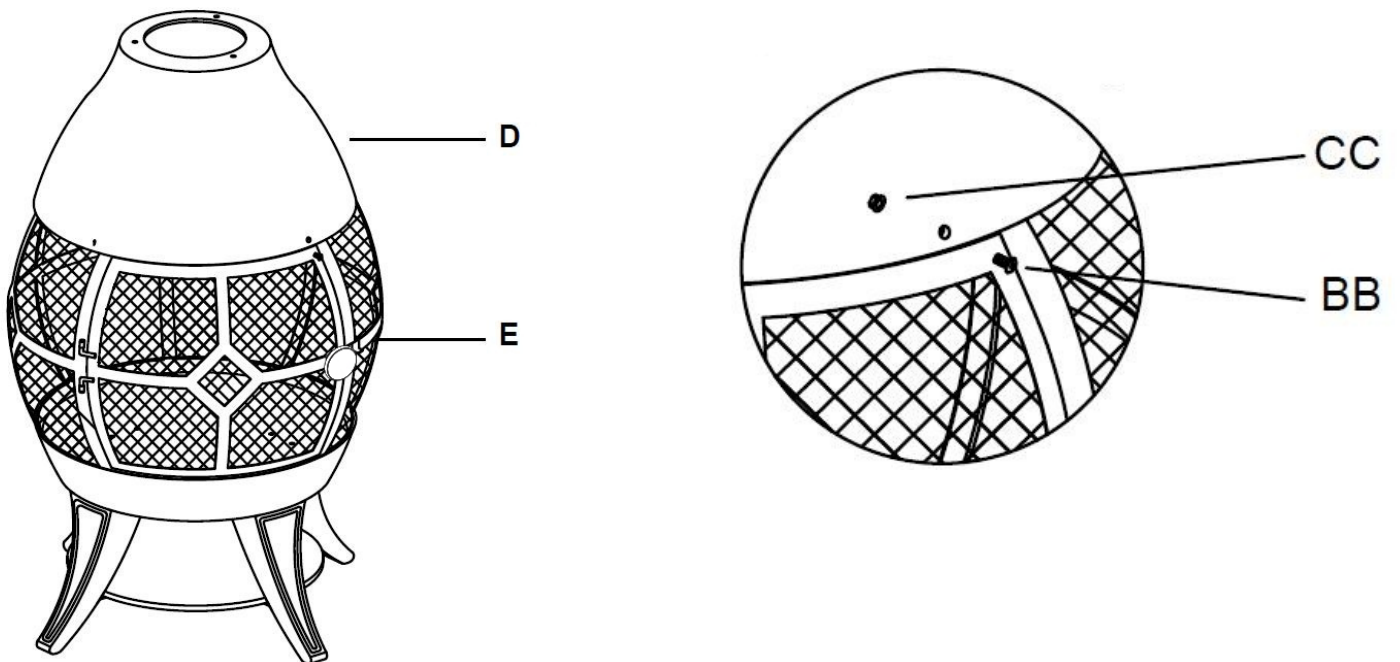

Step 6: Attach the chimney flue (C) to chimney top (D) using M6×25mm bolts (BB) and M6 nuts (CC). Securely tighten each bolt (BB) and nut (CC) with an M6 wrench and Philips screwdriver (not included).

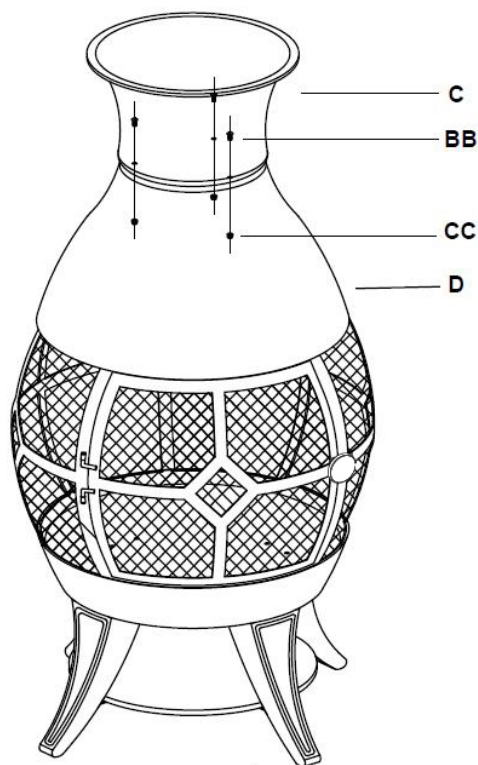

Step 7: Place the poker (I) near the chimney and the chimney cover (B) on the top of the assembly.

