


# ASSEMBLY INSTRUCTIONS

## IP-D8812K

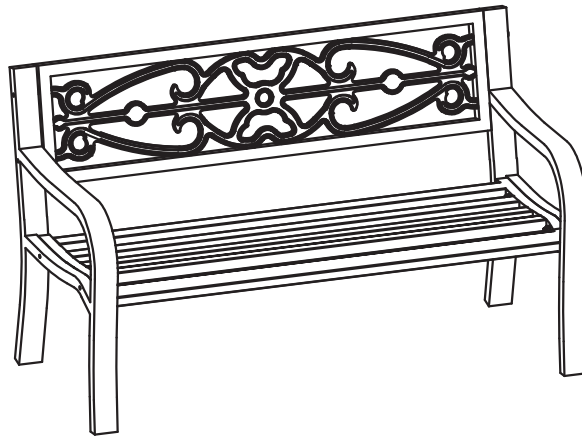











### READ & SAVE THESE INSTRUCTIONS:

Please read instructions carefully and identify all parts before assembly.

- Assemble your unit in an area free from any object that might scratch the surface of your unit.
- Examine all packing material before discarding, shortages may occur from parts left in the packing material.
- Follow step by step instruction.

### Parts List

| NO. | PARTS   | DESCRIPTION        | Q'TY | NO. | PARTS  | DESCRIPTION      | Q'TY |
|-----|---|--------------------|------|-----|--|------------------|------|
| A   |  | RIGHT LEG          | 1PC  | B   |  | LEFT LEG         | 1PC  |
| C   |  | SEAT               | 1PC  | D   |  | BACK             | 1PC  |
| E   |  | WRENCH             | 1PC  | F   |  | HEXAGONAL WRENCH | 1PC  |
| G   |  | BOLT 55MM          | 4PCS | H   |  | BOLT 45MM        | 4PCS |
| I   |  | HEXAGONAL NUT CAPS | 4PCS | J   |  | WASHER           | 4PCS |

# ASSEMBLY INSTRUCTIONS


## IP-D8812K

### PREPARATION

- Remove all parts from packaging. Check the parts quantity mentioned on parts list.
- Spread out all parts on a soft, level surface to avoid scratching parts.
- Do not tighten nuts with wrench until assembly is complete.


### Step 1:

Attach back (D) to legs (A & B) using bolts (G) as shown. Attach Seat (C) to legs (A & B) using bolts (H), washer (J), and hexagonal nut caps (I) as shown. Repeat on the other side, do not tighten bolts (G & H) until seat (C) and back (D) are in place and bench is at 90 degrees with floor. At last, use the Hexagonal wrench (F) on the bolt to tighten the bolts (G), use wrench (E) to hold the hexagonal nut caps (I) and the Hexagonal wrench (F) on the bolt to tighten the bolts (H).

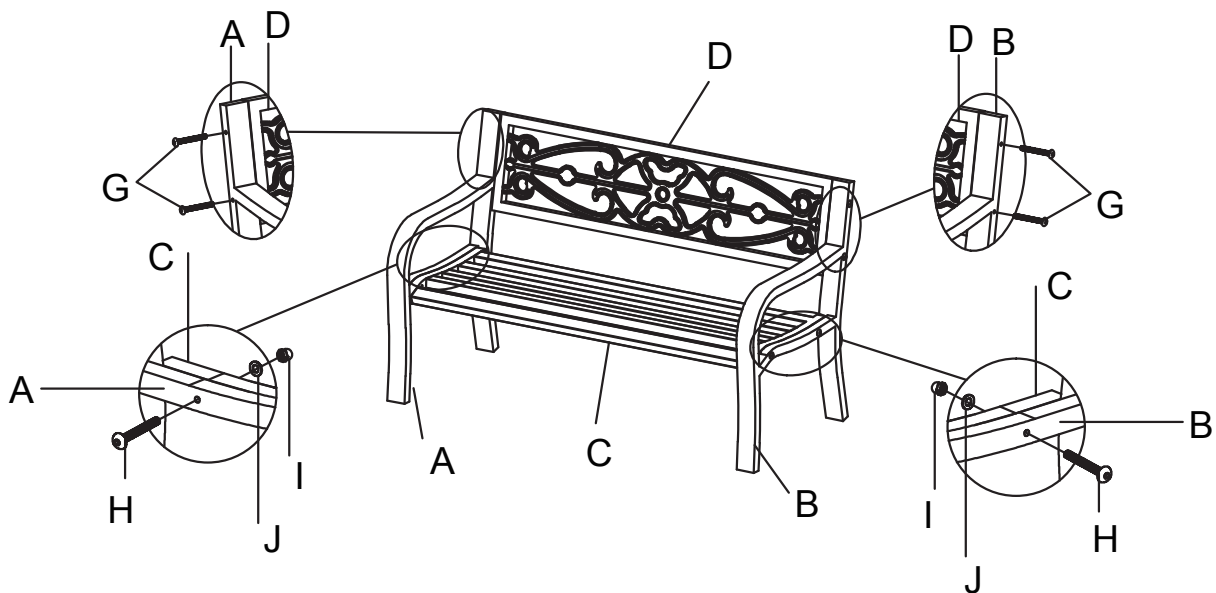

### Step 2

Your bench is now completely assembled and ready for use.

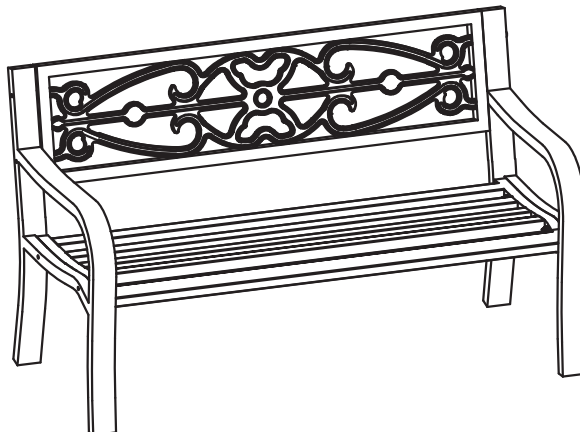

# **ASSEMBLY INSTRUCTIONS**

## **IP-D8812K**

### **CARE AND MAINTENANCE**

Though its powder-coated finish is rust-resistant, steel is prone to rust over time with exposure to the elements. In case of rust or scratches, lightly sand the affected area and apply touch-up paint. To maintain the finish, periodically apply wax with a soft cloth.