




**Uptown Swivel Balcony Chair**  
**RXTV-08BCT-C**  
**Assembly Instructions**

**Step 1: Remove protective wrapping and lay all parts on floor and identify all parts packed in carton against attached parts list.**











**Step 2: Attach Seat Bucket (A) to Base (B) as shown in photo 1, using Bolt (C), Steel Plate (I), Spring Washer (D) and Washer (E) and Nut (F).**

**Step 3: Make sure all bolts are aligned properly and tight and then place bolt covers (G) and Nut covers (H) over bolts and Nut cover over nuts.**

**NOTE: IT IS USER'S RESPONSIBILITY TO MAKE SURE ALL PARTS ARE ASSEMBLED AND TIGHTENED PROPERLY AND SECURELY**

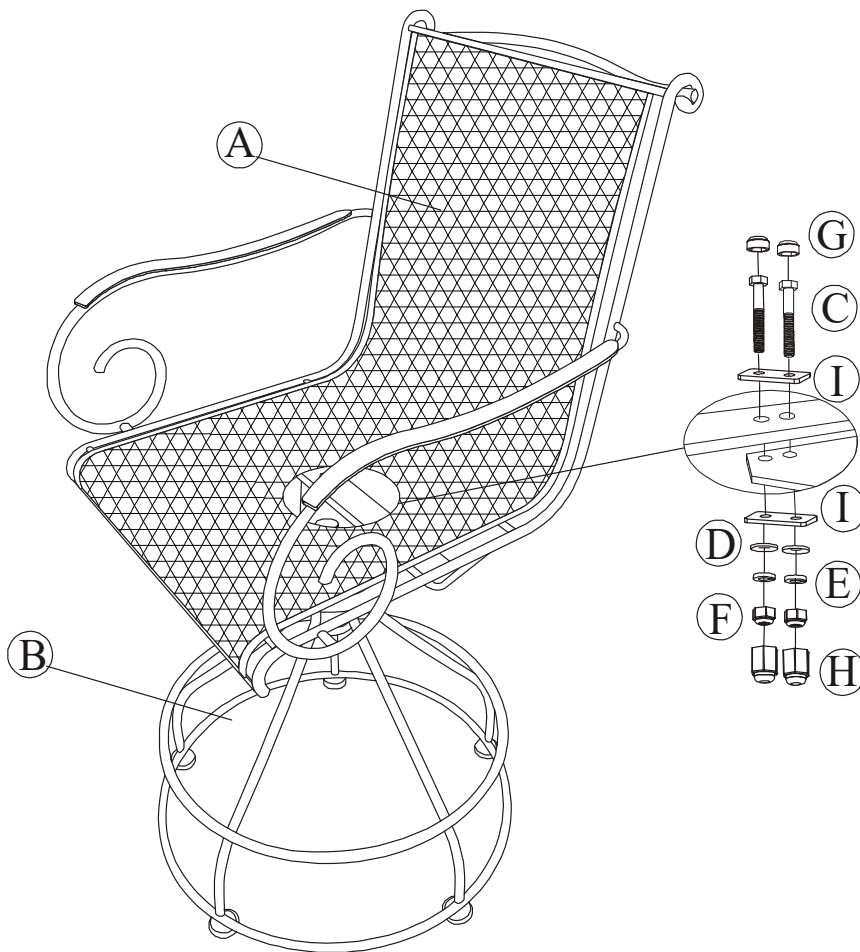

**Diagram:**

| Ref | Part Name     | Part Image  | Qty | Ref | Part Name   | Part Image  | Qty |
|-----|---------------|---|-----|-----|-------------|---|-----|
| A   | Seat Bucket   |  | 1   | F   | Nut         |  | 4   |
| B   | Base          |  | 1   | G   | Bolt Cover  |  | 4   |
| C   | Bolt          |  | 4   | H   | Nut Cover   |  | 4   |
| D   | Spring Washer |  | 4   | I   | Steel Plate |  | 4   |
| E   | Washer        |  | 4   | J   | Hex wrench  |  | 2   |

**WOODARD**  
**Customer Service Hours**  
**8:00am-5:00pm CST Monday to Friday**  
**Phone: (800) 877-2290 Fax: (800) 733-4257**

PRINTED IN CHINA